

9. ECO Gauge

A: SPECIFICATION

Since the meter - main assembly cannot be disassembled, do not remove or inspect the ECO gauge alone. (Do not remove the cover on the back surface.)