

User Customizing

INSTRUMENTATION/DRIVER INFO (DIAGNOSTICS)

11. User Customizing

A: OPERATION

For operation procedures, refer to the “PC application help for Subaru Select Monitor”.

B: LIST

- Combination meter

Items to be displayed	Initial setting value	Customize setting	Note
External air temperature compensation value	±0°C	-5°C — +5°C	Temperature compensation can only be performed by 1°C (1°C change = 1.8°F) interval.
Mean fuel consumption compensation value	±0%	+10% — -10%	—
Second level belt warning customize	Shifting prohibited	Shifting prohibited/ Shifting permitted	—