


21. Keyless Entry Control Module

A: REMOVAL


1. 4 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel assembly - rear shelf. <Ref. to EI-112, REMOVAL, Rear Shelf Trim.>
- 3) Remove the keyless entry control module.
 - (1) Disconnect the connector.
 - (2) Remove the bolt and then remove the keyless entry control module.

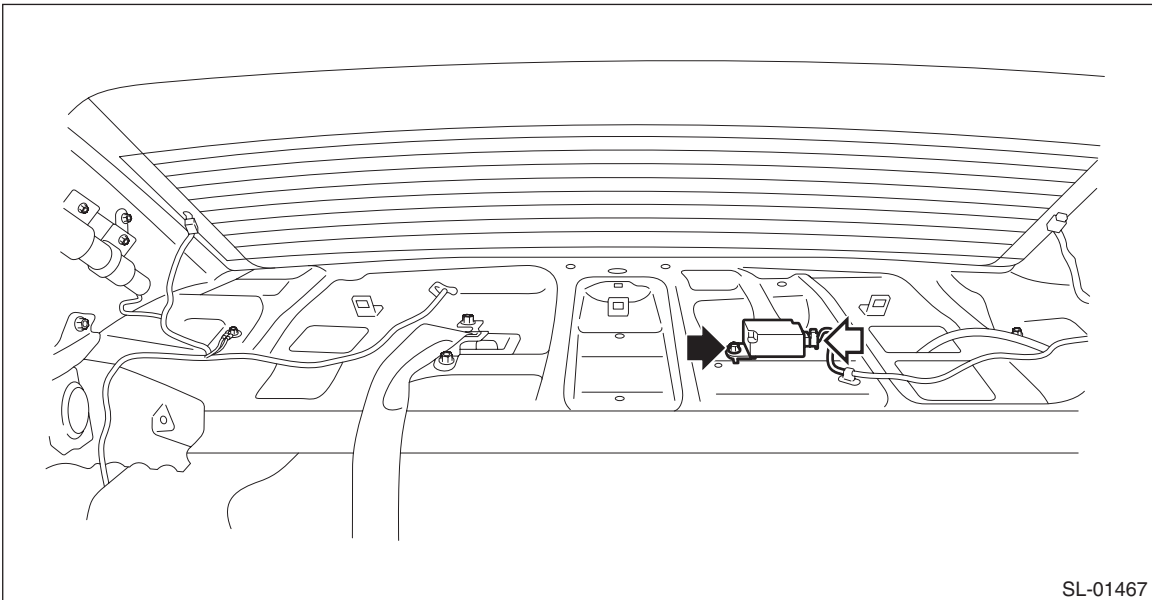

2. 5 DOOR MODEL/XV MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - rear apron LH. <Ref. to EI-105, REMOVAL, Rear Quarter Trim.>
- 3) Remove the keyless entry control module.
 - (1) Disconnect the connector.
 - (2) Remove the bolt and then remove the keyless entry control module.

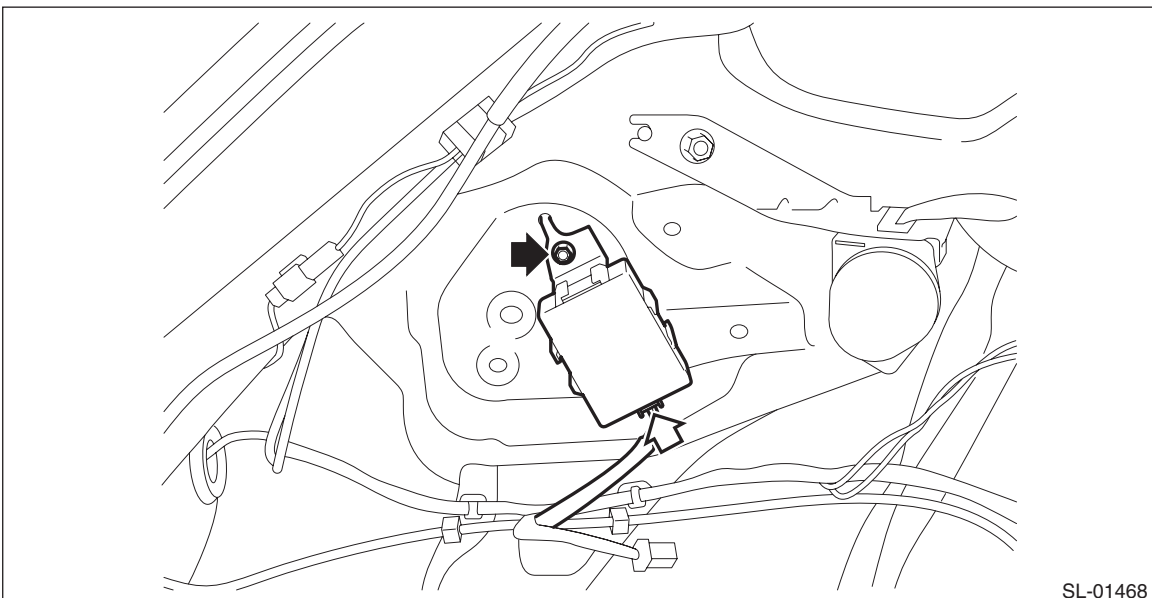

Keyless Entry Control Module

SECURITY AND LOCKS

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

Refer to "INSTALLATION" of "Rear Shelf Trim" or "Rear Quarter Trim".

- Rear shelf trim: <Ref. to EI-116, INSTALLATION, Rear Shelf Trim.>
- Rear quarter trim: <Ref. to EI-111, INSTALLATION, Rear Quarter Trim.>

Tightening torque:

Keyless entry control module: 13 N·m (1.33 kgf-m, 9.6 ft-lb)