


## 14. Instrument Panel Lower Cover

### A: REMOVAL

- 1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 2) Remove the clips, and remove the cover - instrument panel side LH.

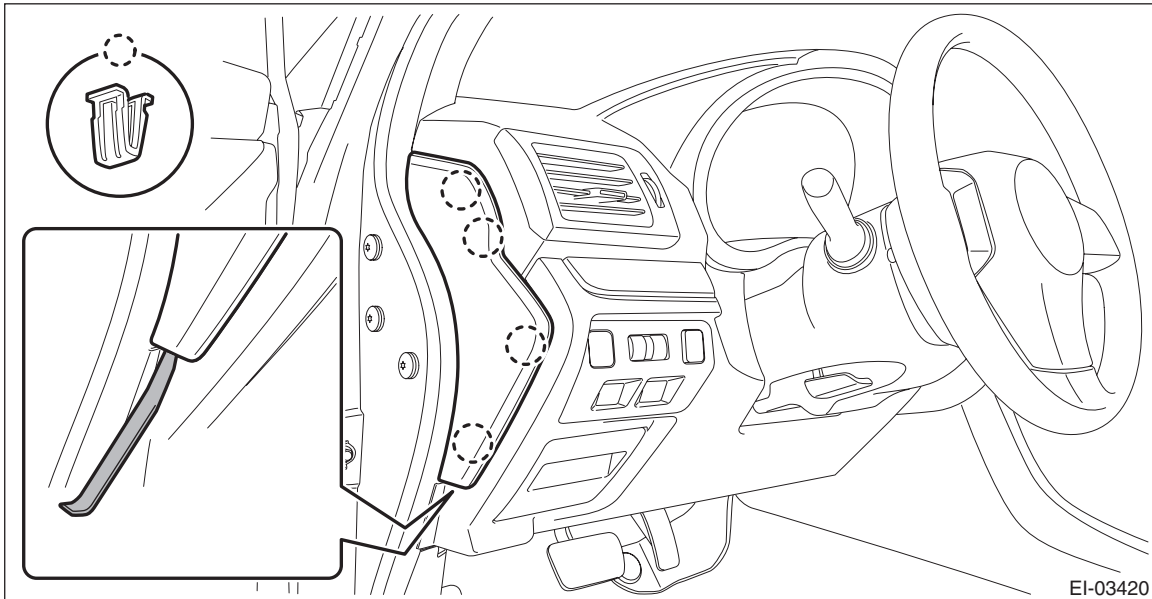


#### NOTE:

Using a plastic remover, open the cover - instrument panel side LH.

- 3) Remove the cover assembly - instrument panel LWR driver INN and OUT.

#### CAUTION:

**When removing the cover assembly - instrument panel LWR driver, be sure to pull it toward you. If attempting to remove by turning it upward, the claws may be damaged.**

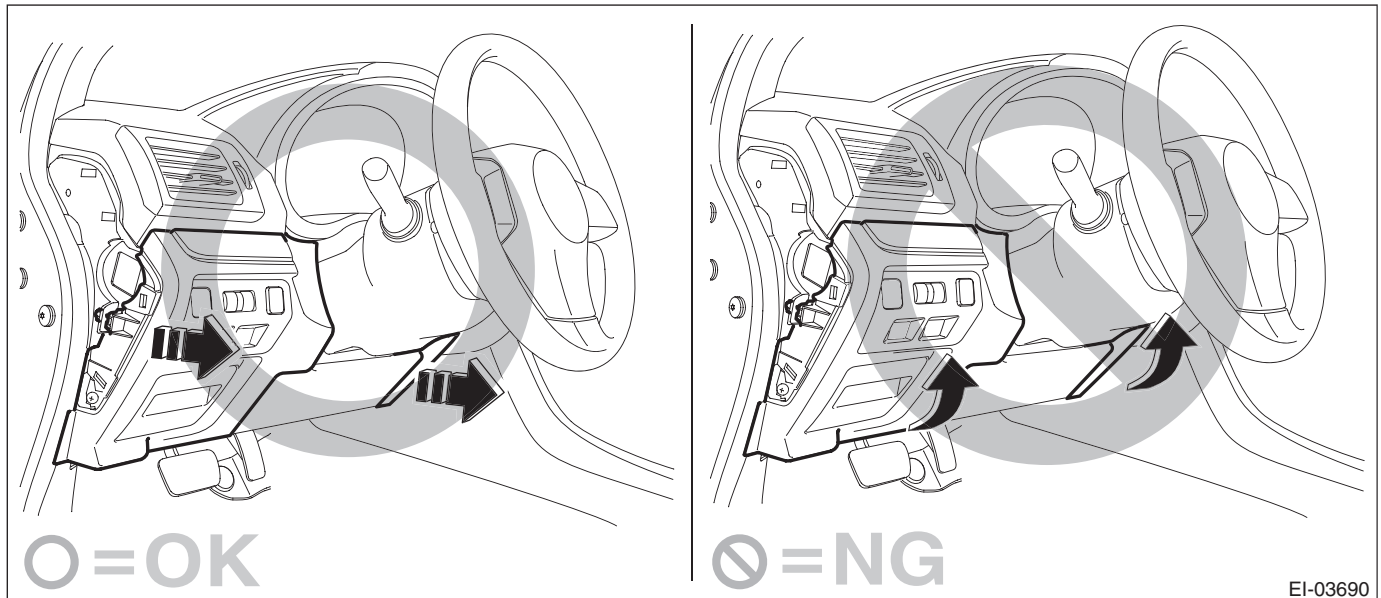


- (1) Remove the screws and release the clips and claws.

# Instrument Panel Lower Cover

## EXTERIOR/INTERIOR TRIM

(2) Disconnect the harness connectors, and remove the cover assembly - instrument panel LWR driver INN and OUT.

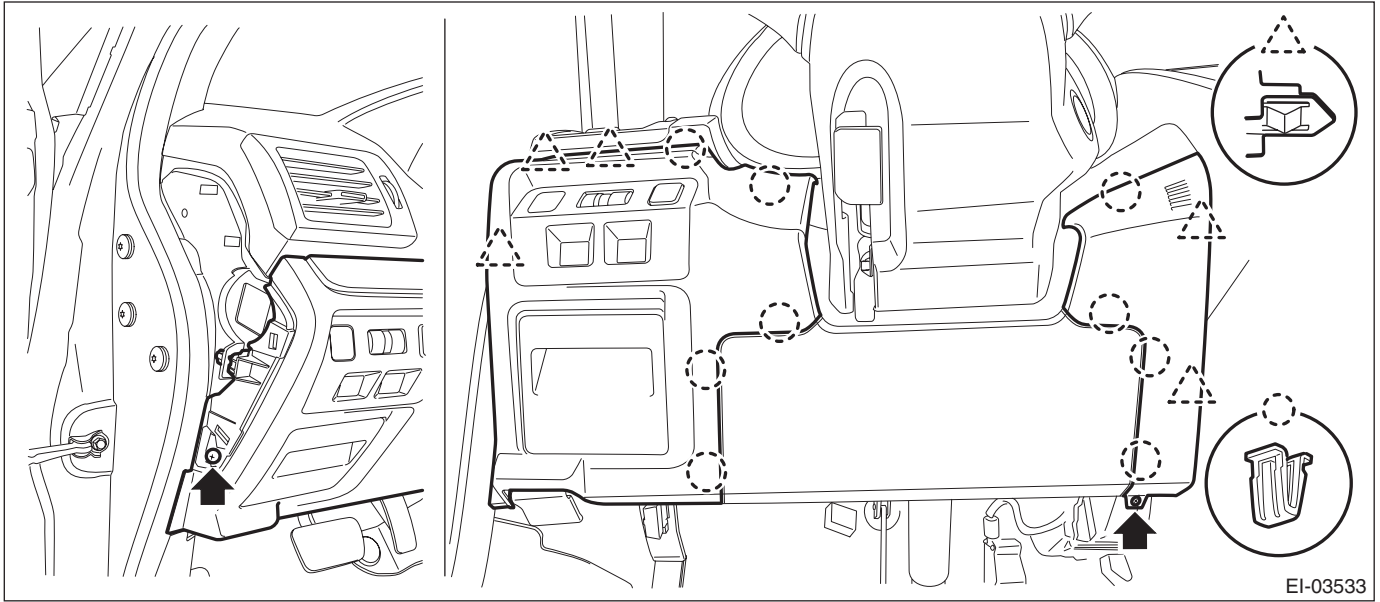

## B: INSTALLATION

Install each part in the reverse order of removal.