

Assist Grip


EXTERIOR/INTERIOR TRIM

25. Assist Grip

A: REMOVAL

Remove the assist rail.

- 1) Remove the cap (a) by pulling the both sides of the cap (a) using a flat tip screwdriver wrapped with a protection tape.
- 2) Pull the assist grip toward you (to the vehicle center) and remove the metal clip from the bracket.

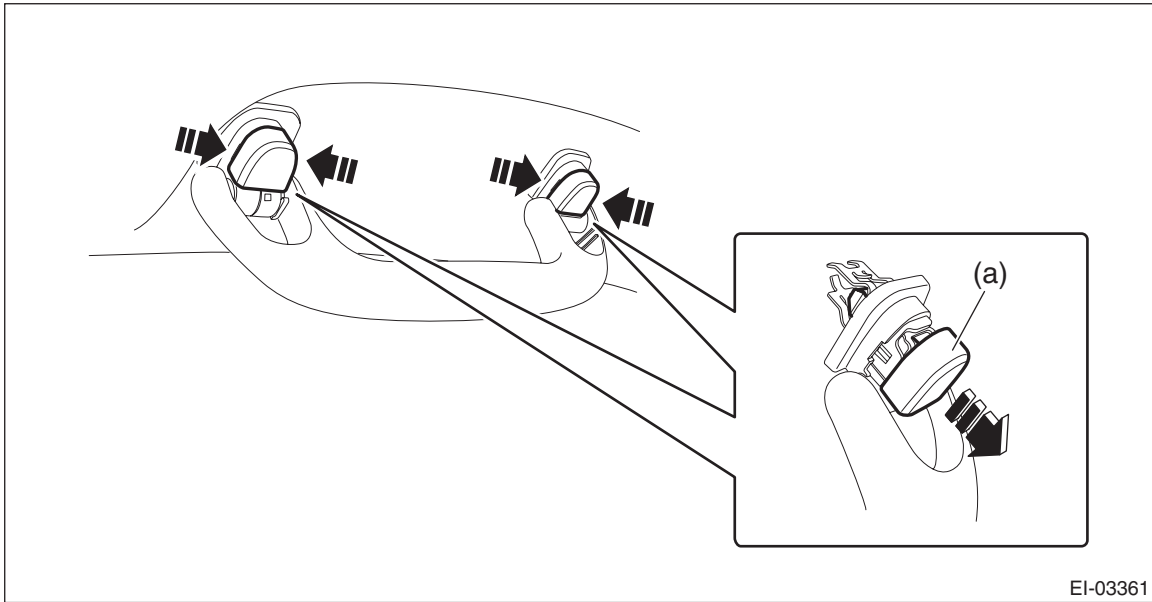

B: INSTALLATION

Install each part in the reverse order of removal.