



27.Rear Gate Trim

A: REMOVAL

- 1) Remove the trim panel - rear gate UPR.
 - (1) Remove the claws on the trim edge.
 - (2) Release the claws in the center of trim, and remove the trim panel - rear gate UPR.

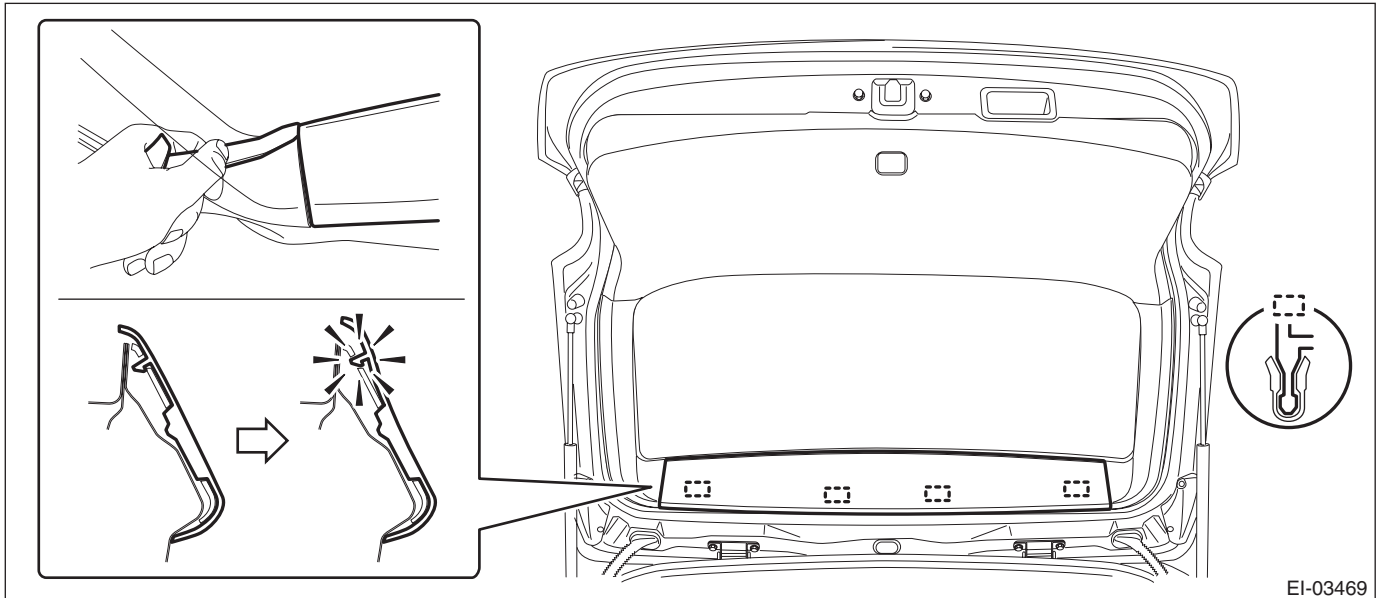


- 2) Remove the trim panel - rear gate pillar side.
 - (1) Release the claws.
 - (2) Remove the claws on the bottom of trim, and remove the trim panel - rear gate pillar side.

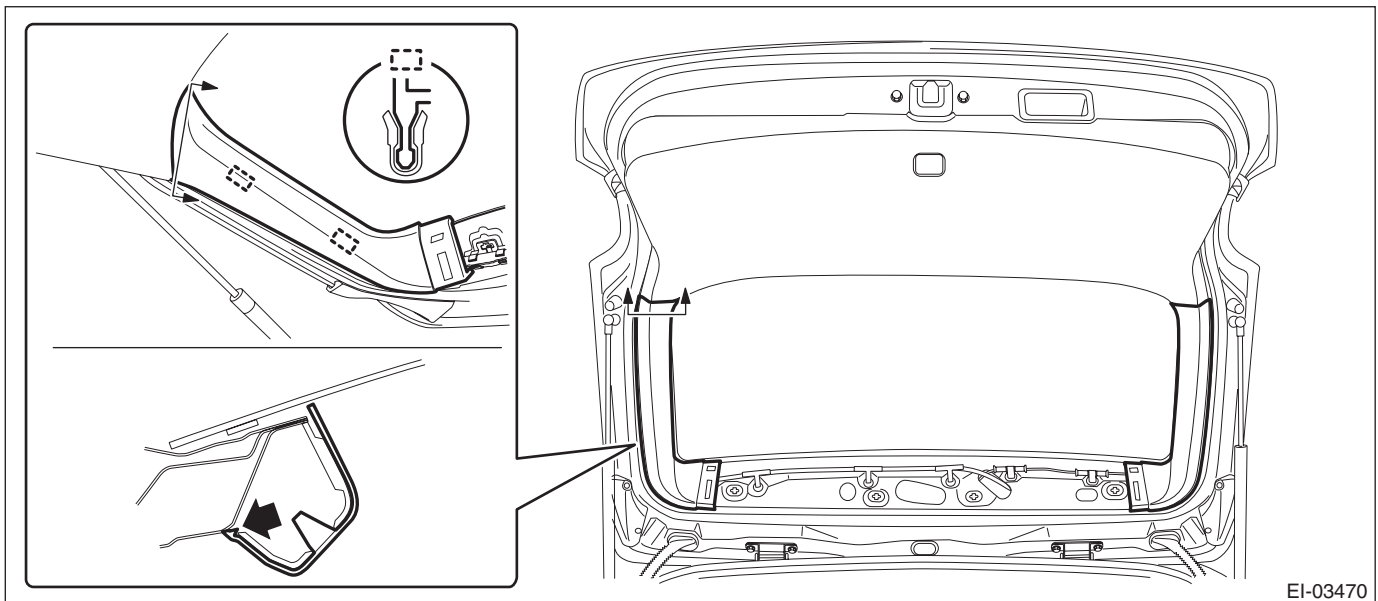

Rear Gate Trim

EXTERIOR/INTERIOR TRIM

- 3) Remove the trim panel - rear gate LWR.
 - (1) Remove the clips on both ends.
 - (2) Release the clips, and remove the trim panel - rear gate LWR.

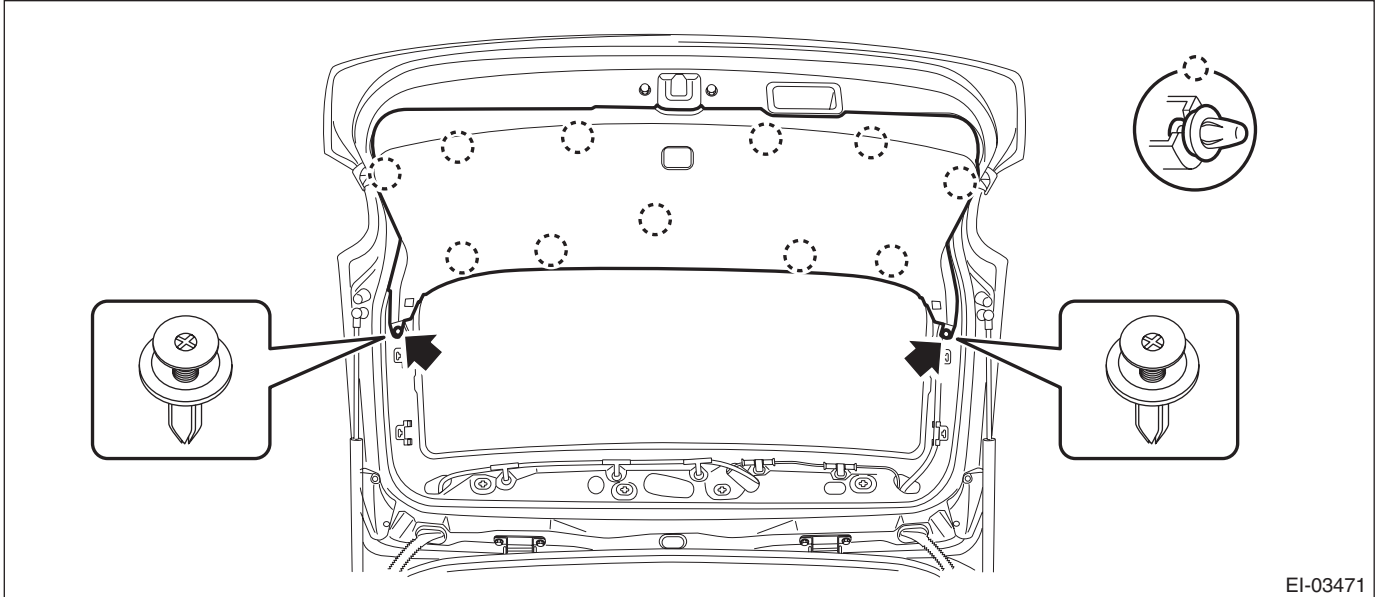

B: INSTALLATION

Install each part in the reverse order of removal.