


# Relay and Fuse

CRUISE CONTROL SYSTEM

## 2. Relay and Fuse

### A: LOCATION

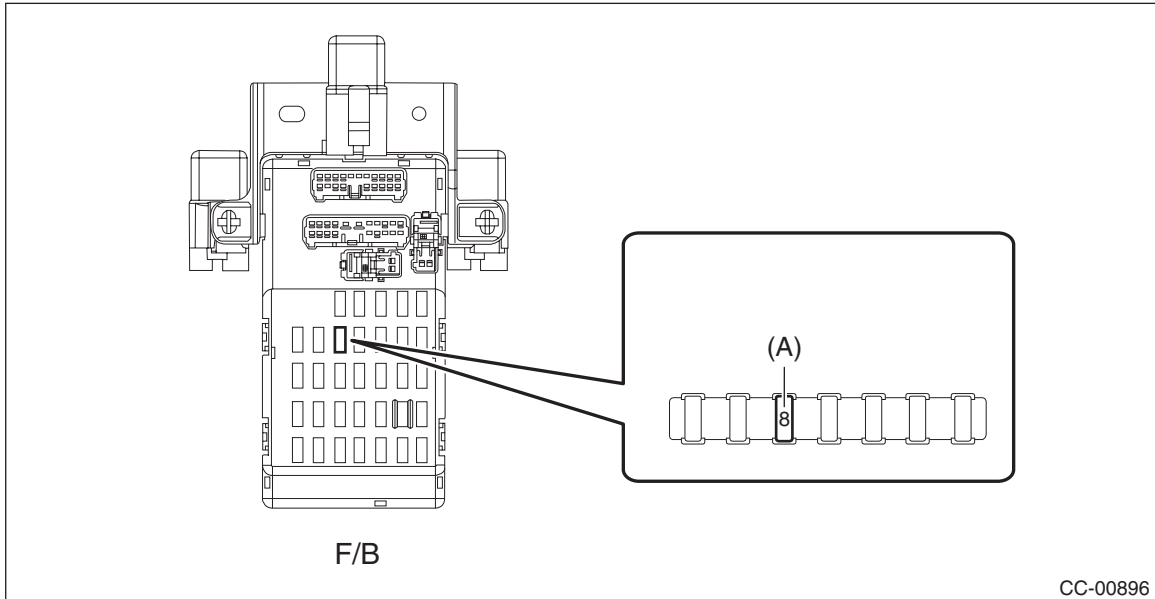

Relay & fuse box	Fuse 15A (stop light & brake switch)	(A)
------------------	--------------------------------------	-----

#### NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

### B: INSPECTION

#### 1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

#### NOTE:

If the fuse is blown again, check the system wiring harness.