

# Cruise Control Module

CRUISE CONTROL SYSTEM

---

## 4. Cruise Control Module

### A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

### B: REMOVAL

For removal procedures of the control module, refer to “FUEL INJECTION (FUEL SYSTEM)”. <Ref. to FU(H4DO)-102, REMOVAL, Engine Control Module (ECM).>

### C: INSTALLATION

For installation procedures of the control module, refer to “FUEL INJECTION (FUEL SYSTEM)”. <Ref. to FU(H4DO)-103, INSTALLATION, Engine Control Module (ECM).>