

## Fuel Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

### **8. Fuel Level Sensor**

#### **A: REMOVAL**

For removal procedures, refer to the "FU(H4DO)" section. <Ref. to FU(H4DO)-153, REMOVAL, Fuel Level Sensor.>

#### **B: INSTALLATION**

For installation procedures, refer to the "FU(H4DO)" section. <Ref. to FU(H4DO)-153, INSTALLATION, Fuel Level Sensor.>

#### **C: INSPECTION**

For inspection procedures, refer to the "FU(H4DO)" section. <Ref. to FU(H4DO)-154, INSPECTION, Fuel Level Sensor.>