

## Fuel Sub Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

### 9. Fuel Sub Level Sensor

#### A: REMOVAL

For removal procedures, refer to the "FU(H4DO)" section. <Ref. to FU(H4DO)-155, REMOVAL, Fuel Sub Level Sensor.>

#### B: INSTALLATION

For installation procedures, refer to the "FU(H4DO)" section. <Ref. to FU(H4DO)-159, INSTALLATION, Fuel Sub Level Sensor.>

#### C: INSPECTION

For inspection procedures, refer to the "FU(H4DO)" section. <Ref. to FU(H4DO)-160, INSPECTION, Fuel Sub Level Sensor.>