

## Read Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

---

### 7. Read Diagnostic Trouble Code (DTC)

#### A: OPERATION

For details of operation procedures, refer to “PC application help for Subaru Select Monitor”.