


Harness Components Location

WIRING SYSTEM

54. Harness Components Location

A: LOCATION


1. 4 DOOR MODEL

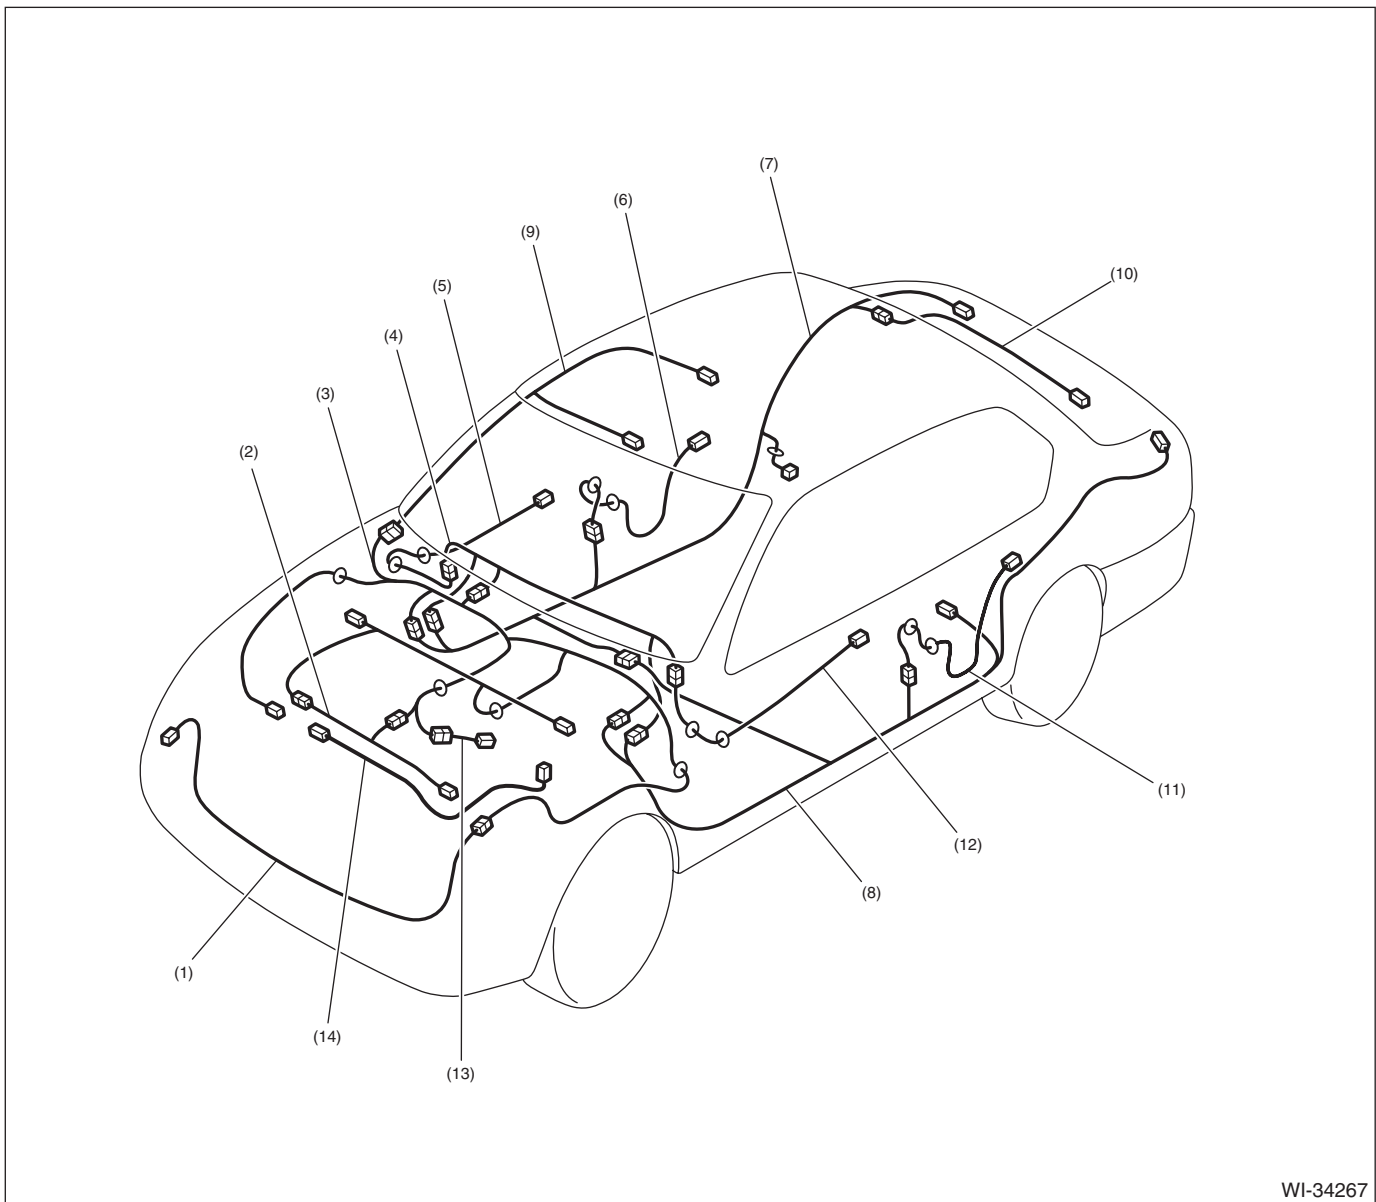

WI-34267

- | | | |
|-------------------------------------|----------------------------|-------------------------|
| (1) Front wiring harness | (7) Rear wiring harness RH | (12) Front door cord LH |
| (2) Engine wiring harness | (8) Rear wiring harness LH | (13) Transmission cord |
| (3) Bulkhead wiring harness | (9) Roof cord | (14) Generator cord |
| (4) Instrument panel wiring harness | (10) Trunk lid cord | |
| (5) Front door cord RH | (11) Rear door cord LH | |
| (6) Rear door cord RH | | |

2. 5 DOOR MODEL/XV MODEL

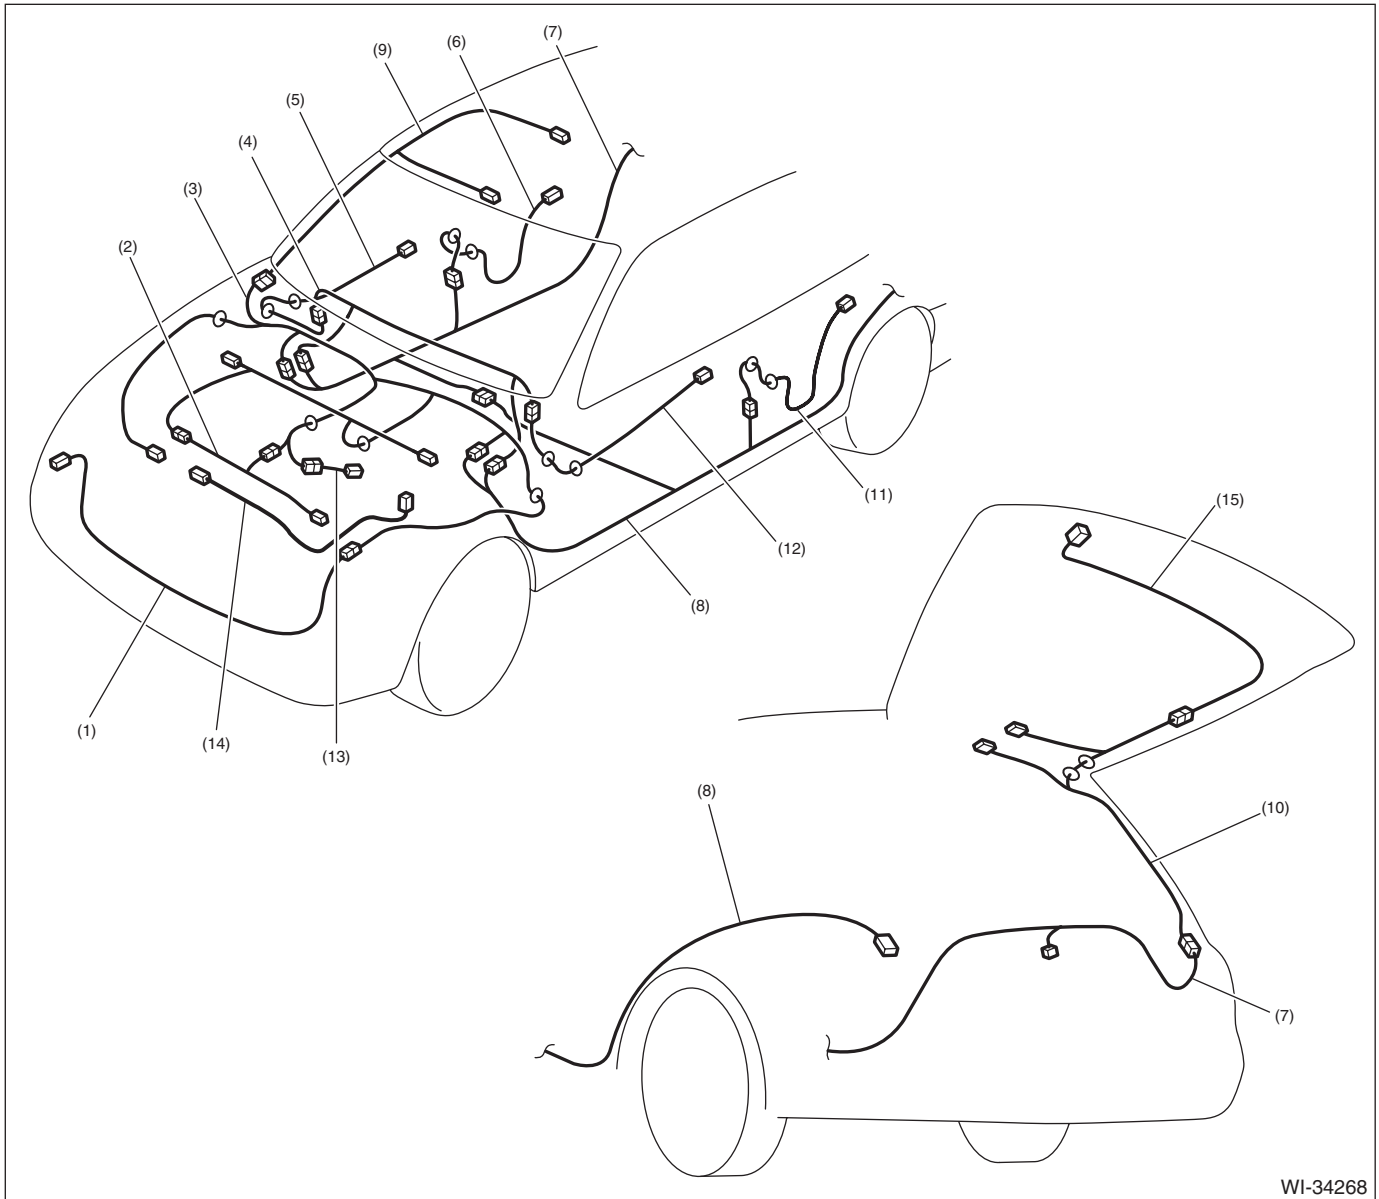

WI-34268

- | | | |
|-------------------------------------|----------------------------|-------------------------|
| (1) Front wiring harness | (7) Rear wiring harness RH | (12) Front door cord LH |
| (2) Engine wiring harness | (8) Rear wiring harness LH | (13) Transmission cord |
| (3) Bulkhead wiring harness | (9) Roof cord | (14) Generator cord |
| (4) Instrument panel wiring harness | (10) Rear gate cord | (15) Rear gate cord |
| (5) Front door cord RH | (11) Rear door cord LH | |
| (6) Rear door cord RH | | |