

## Bulkhead Wiring Harness (In Engine Compartment)

### WIRING SYSTEM

## 56. Bulkhead Wiring Harness (In Engine Compartment)

### A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B3	5	Black	B-2		Mass air flow and intake air temperature sensor
B6	2	Light gray	C-3		Front ABS wheel speed sensor RH
B8	5	Light gray	B-5		Front wiper motor
B10	4	Light gray	C-4		Pressure switch
B11	12	Light gray	B-4	T4	Transmission cord (CVT model)
B12	16	Brown	B-4	T3	
B14	1	Black	C-4		Starter motor
B15	2	Light gray	C-4		Front ABS wheel speed sensor LH
B16	2	Gray	B-4		Brake fluid level switch
B21	54	Black	B-3	E2	Engine wiring harness
B22	16	Brown	B-3		
B24	2	Gray	B-3	T1	Back-up light switch (MT model)
B25	2	Brown	B-3	T2	Neutral position switch 1
B143	20	★	B-5		M/B
B144	9	Brown	B-5		
B145	7	Brown	B-5		
B146	2	Black	C-4		Front washer motor
B147	2	Gray	C-4		Rear washer motor
B164	2	Black	D-3		Keyless buzzer
B177	2	Gray	B-4		Wiper deicer
B186	8	★	B-5		M/B
B310	38	★	B-2		VDC CM
B321	2	Black	B-3		Hood switch
B360	16	Gray	B-4	F109	Through joint connector
B361	14	★	B-4	F108	
B396	2	Brown	D-3		Washer fluid level sensor
B432	8	Black	C-4		SBF holder
B450	10	Black	C-3		Power steering CM
B451	6	Gray	B-3		Torque sensor
B452	2	Black	B-3		Power steering CM
B523	2	Light gray	C-5		Battery temperature sensor
B538	3	Black	C-4		Battery current sensor
B571	2	★	B-5		M/B

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	Yellow	C-3		Front sub sensor LH
AB16	2	Yellow	B-1		Front sub sensor RH

# Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

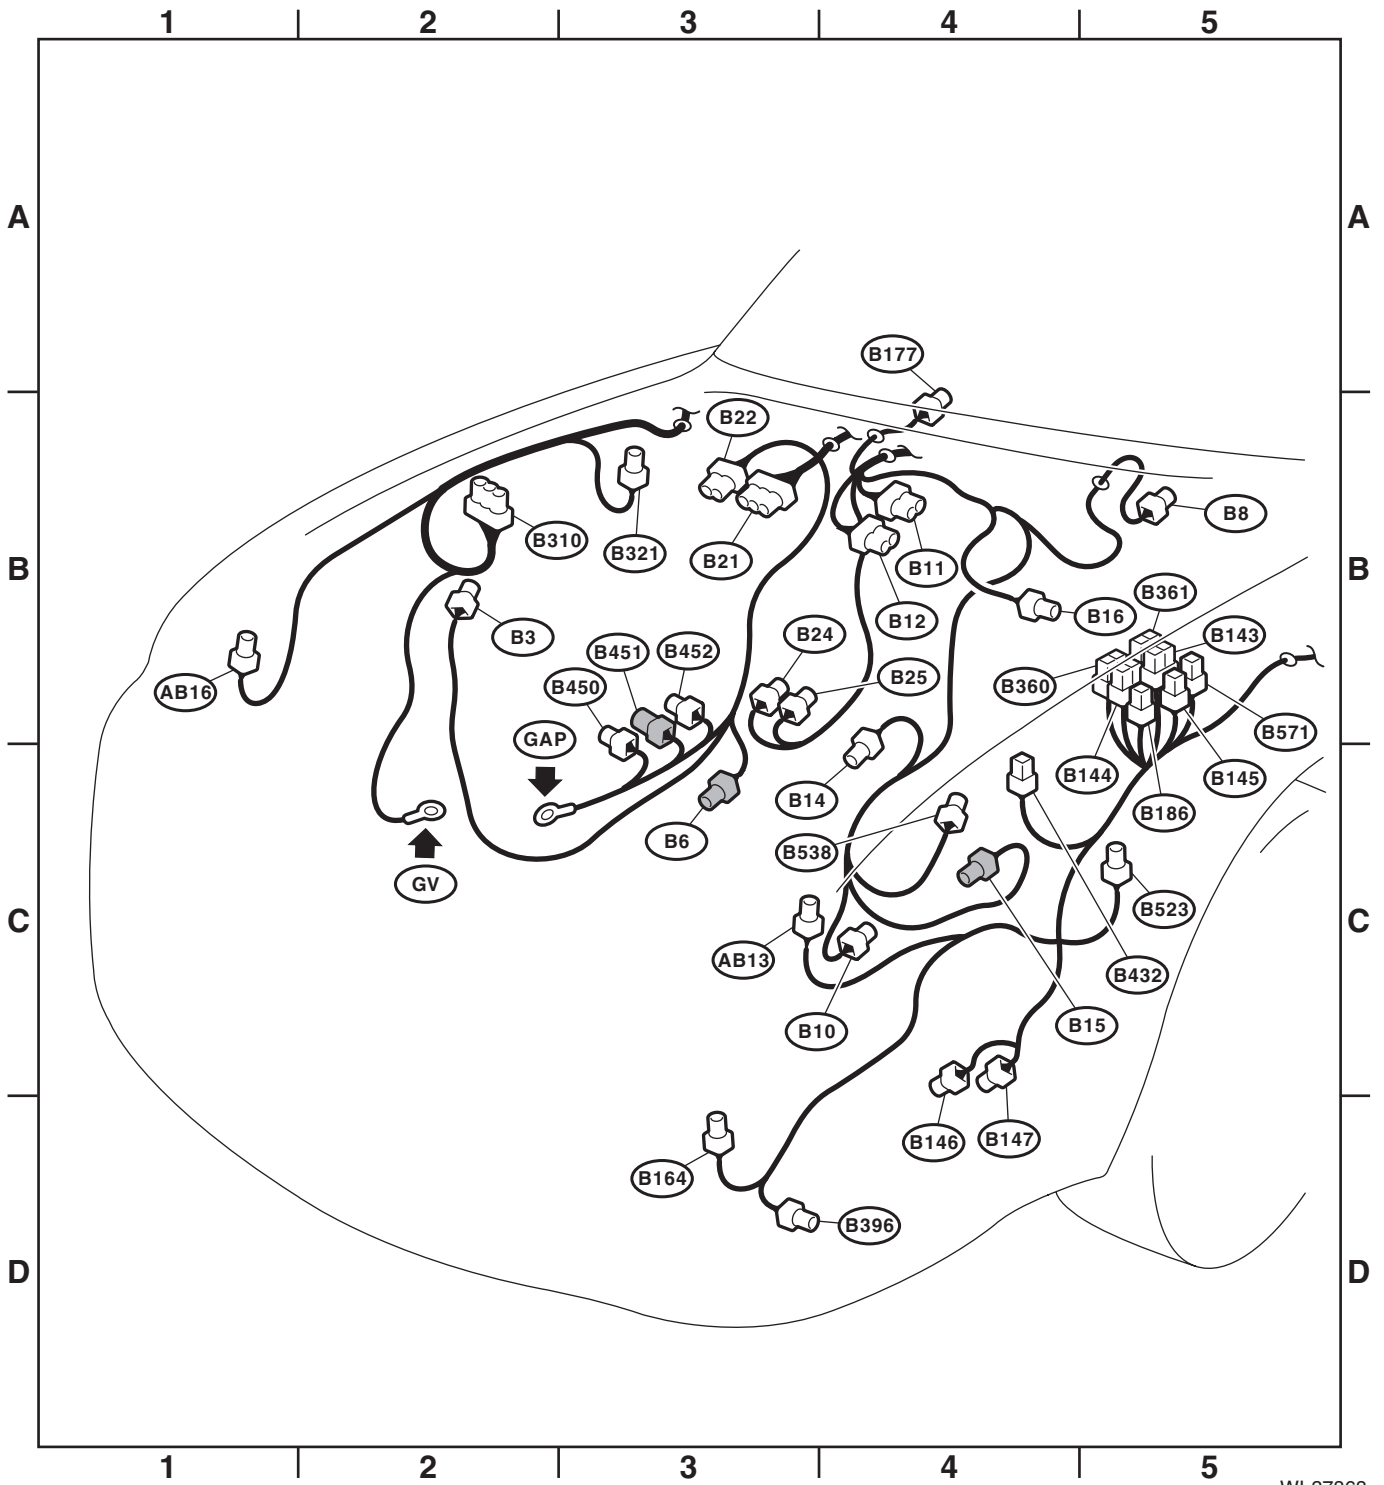

WI-37868