


# Air Intake Boot

INTAKE (INDUCTION)

## 4. Air Intake Boot

### A: REMOVAL

- 1) Remove the clip (A) from the air intake boot.
- 2) Loosen the clamp (B) connecting the air intake boot and air cleaner case (rear).
- 3) Loosen the clamp (C) which connects the air intake boot and throttle body.

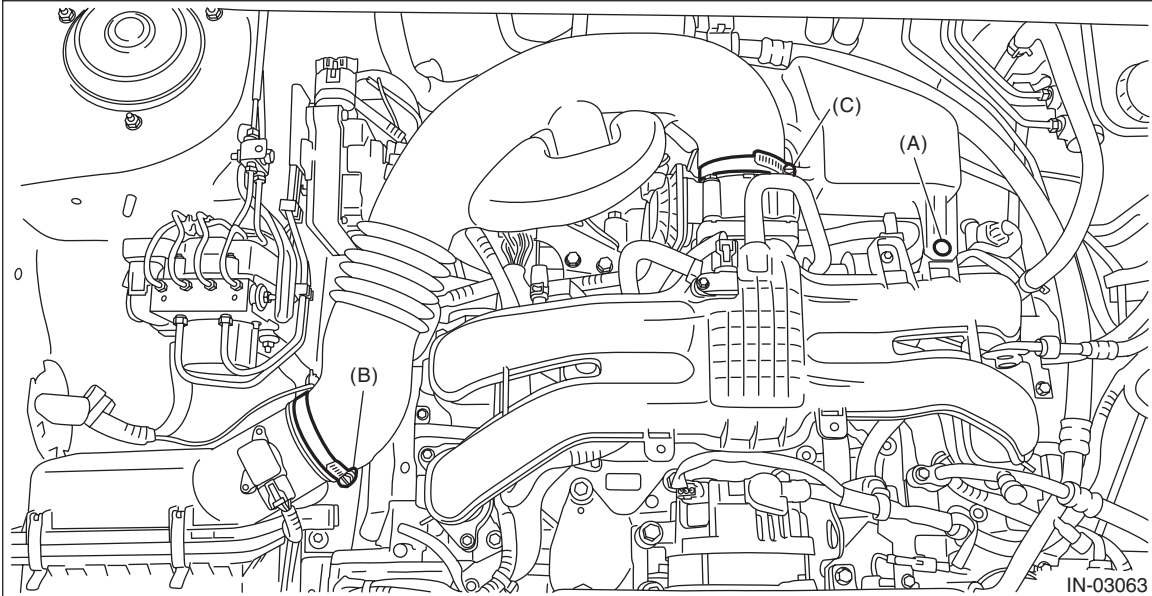

- 4) Disconnect the PCV hose and remove the air intake boot.

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**3 N·m (0.3 kgf·m, 2.2 ft·lb)**

### C: INSPECTION

- 1) Check that the air intake boot has no deformation, cracks or other damages.
- 2) Inspect that no foreign objects are mixed in the air intake boot.