


5. Air Intake Duct

A: REMOVAL

- 1) Remove the clip which secures the air intake duct, and remove the air intake duct.

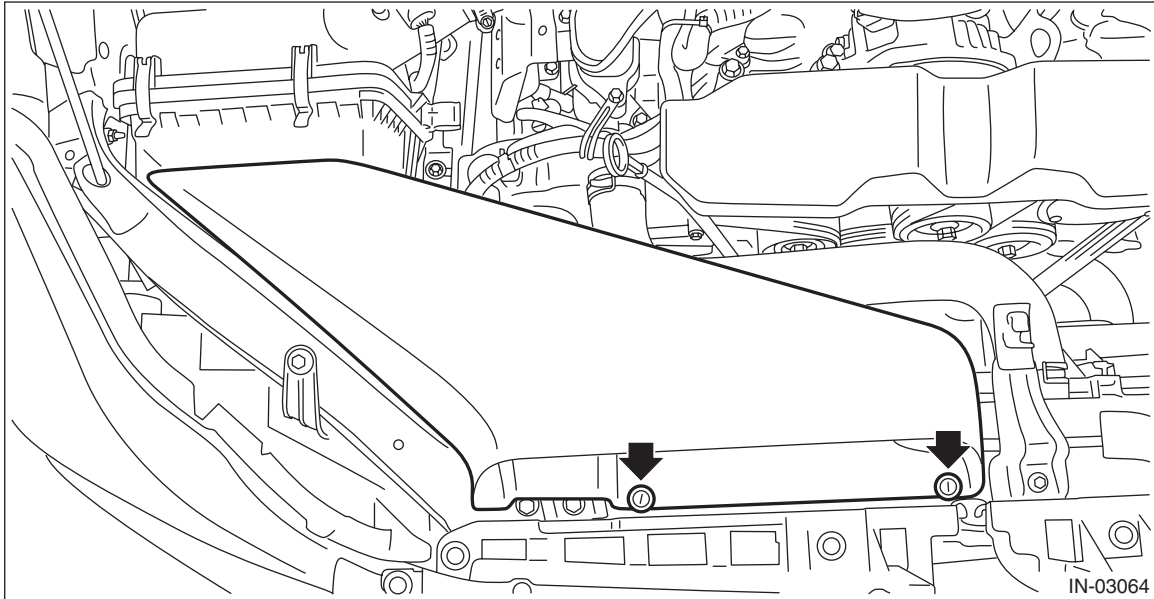

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check that the air intake duct has no deformation, cracks or other damages.
- 2) Inspect that no foreign objects are mixed in the air intake duct.

Air Intake Duct

INTAKE (INDUCTION)

MECHANICAL

ME(H4DO)

	Page
1. General Description	2
2. Compression	24
3. Idle Speed	26
4. Ignition Timing	27
5. Intake Manifold Vacuum	28
6. Engine Oil Pressure	30
7. Fuel Pressure	32
8. Cam Clearance	34
9. Engine Assembly	43
10. Engine Mounting	73
11. Preparation for Overhaul	74
12. V-belt	75
13. Crank Pulley	83
14. Chain Cover	92
15. Timing Chain Assembly	108
16. Cam Sprocket	129
17. Crank Sprocket	137
18. Rocker Cover	139
19. Camshaft	152
20. Cam Carrier	153
21. Cylinder Head	200
22. Cylinder Block	243
23. Intake and Exhaust Valve	349
24. Piston	350
25. Connecting Rod	351
26. Crankshaft	352
27. Engine Trouble in General	353
28. Engine Noise	359