


## 46.Speedometer System

### A: WIRING DIAGRAM

SP-01

SP-01

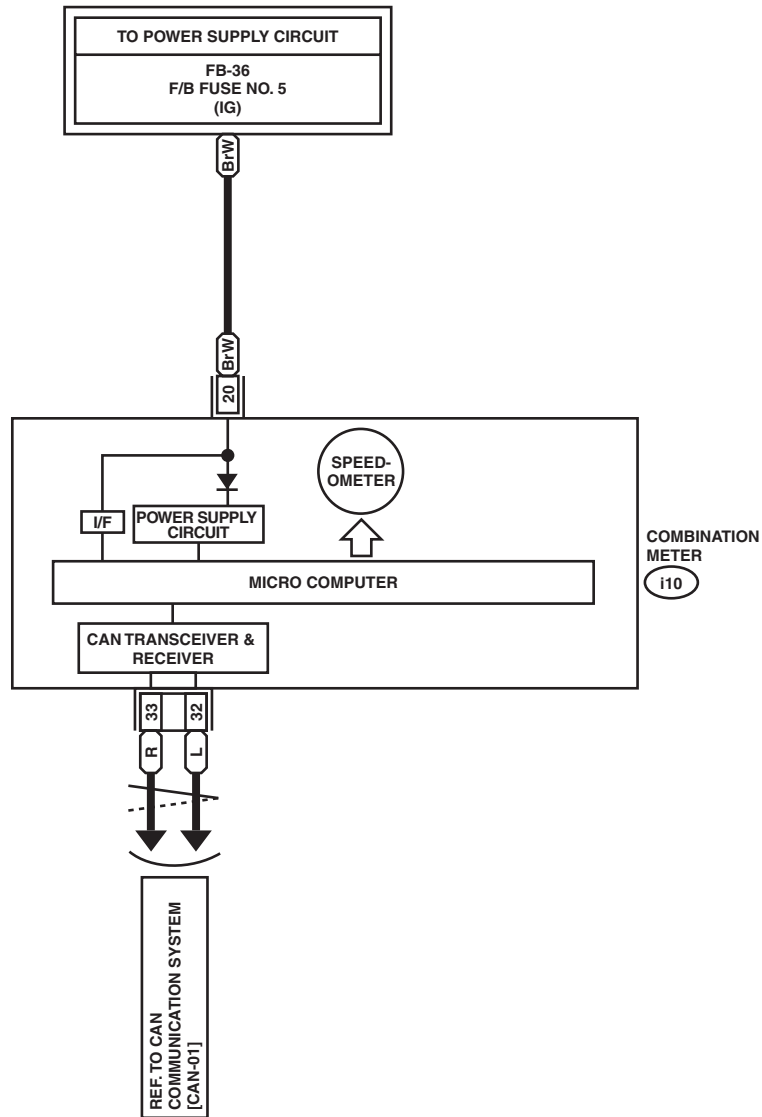

(i10)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40