


## 6. Airbag Control Module

### A: REMOVAL


- 1) Turn ignition switch off.
- 2) Disconnect ground cable from battery and wait for at least 20 seconds before starting work.

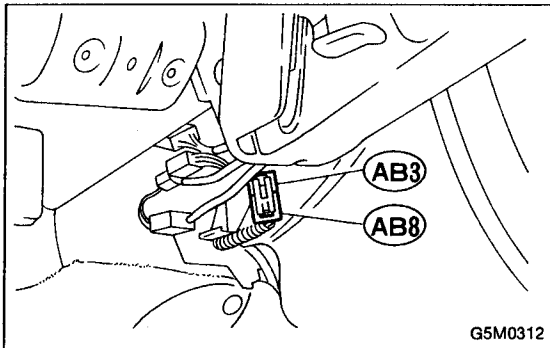


- 3) Remove lower cover. <Ref. to 5-4 [W1A0].☆1 >  
Disconnect airbag connector (AB3) and (AB8) below steering column.

#### CAUTION:

**Do not reconnect airbag connector at steering column until airbag control module is securely re-installed.**

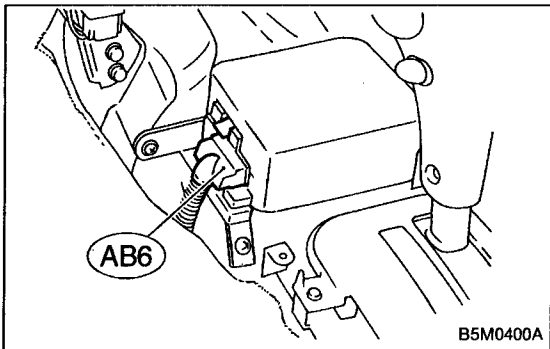

- 4) Remove console box. <Ref. to 5-4 [W1A0].☆1 >
- 5) Disconnect 12-pin yellow connector from airbag control module. <Ref. to 5-5 [M2-6].☆1 >

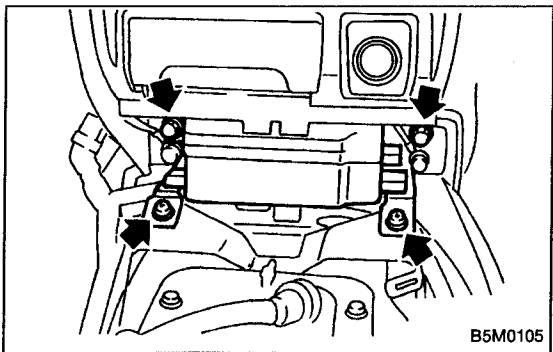

- 6) Using TORX® BIT T40 (Tamper resistant type), remove two TORX® bolts.  
Discard the old TORX® bolts.

#### CAUTION:

**Use new TORX® bolts during re-assembly.**