


cal Wiring Harness and Ground Point

2. BULKHEAD WIRING

Connector			Connecting to	
Pole	Color	Area	No.	Name
2	Brown	B-2		Pressure sources switching solenoid
3	Black	B-2		Pressure sensor
5	Gray	B-2		Mass air flow sensor
2	Gray	B-2		AT dropping resistor
4	Gray	B-3		Cruise control pump
6	*	B-3		Front wiper motor
2	Black	A-2		FWD switch
16	Gray	B-3	T4	Transmission
12	Gray	B-2	T3	
6	Gray	B-3		Ignitor
1	Black	B-3		Starter (Magnet)
2	Gray	B-2		Brake fluid level switch
2	Black	B-3		Vehicle speed sensor
3	Dark gray	B-2		Front oxygen sensor
4	*	B-2	T5	Rear oxygen sensor cord (Other models)
4	*	B-2		Rear oxygen sensor (California model)
6	Light gray	B-2	E1	Engine wiring harness
12	Light gray	B-2	E2	
16	Light gray	B-2	E3	
2	Black	B-3		M/B
3	*	B-3		
1	Brown	B-3		
2	*	B-2		Rear washer motor
2	Green	B-3		Front washer motor

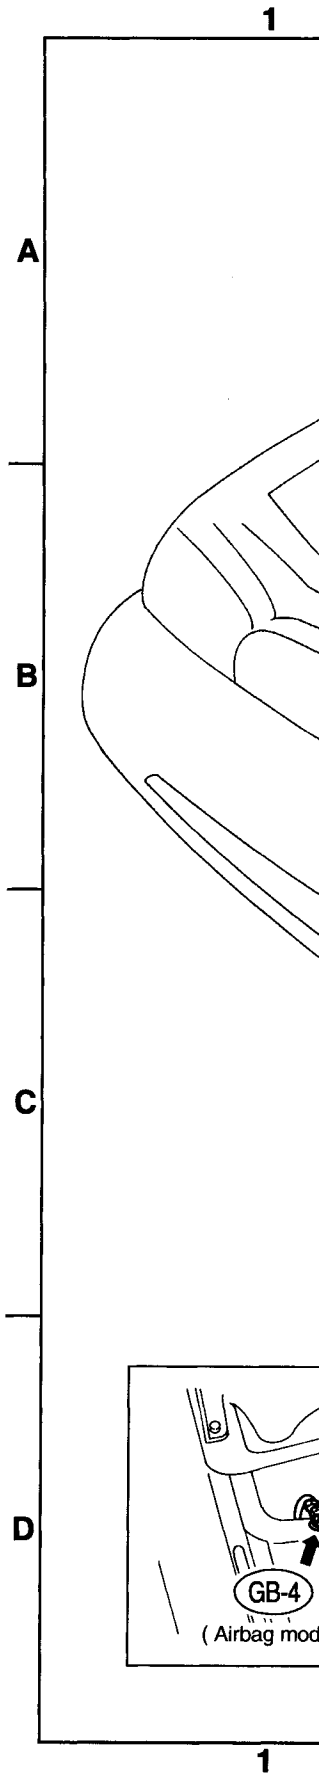


8. Electrical Wiring Harness and Ground Point

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B1	2	Brown	B-2		Pressure sources switching solenoid
B2	3	Black	B-2		Pressure sensor
B3	5	Gray	B-2		Mass air flow sensor
B4	2	Gray	B-2		AT dropping resistor
B7	4	Gray	B-3		Cruise control pump
B8	6	*	B-3		Front wiper motor
B9	2	Black	A-2		FWD switch
B11	16	Gray	B-3	T4	Transmission
B12	12	Gray	B-2	T3	
B13	6	Gray	B-3		Ignitor
B14	1	Black	B-3		Starter (Magnet)
B16	2	Gray	B-2		Brake fluid level switch
B17	2	Black	B-3		Vehicle speed sensor
B18	3	Dark gray	B-2		Front oxygen sensor
B19	4	*	B-2	T5	Rear oxygen sensor cord (Other models)
	4	*	B-2		Rear oxygen sensor (California model)
B20	6	Light gray	B-2	E1	Engine wiring harness
B21	12	Light gray	B-2	E2	
B22	16	Light gray	B-2	E3	
B26	2	Black	B-3		M/B
B27	3	*	B-3		
B28	1	Brown	B-3		
B29	2	*	B-2		Rear washer motor
B110	2	Green	B-3		Front washer motor

*: Non-colored

2. BULKHEAD WIRING HARNESS AND GROUND POINT (IN ENGINE ROOM)

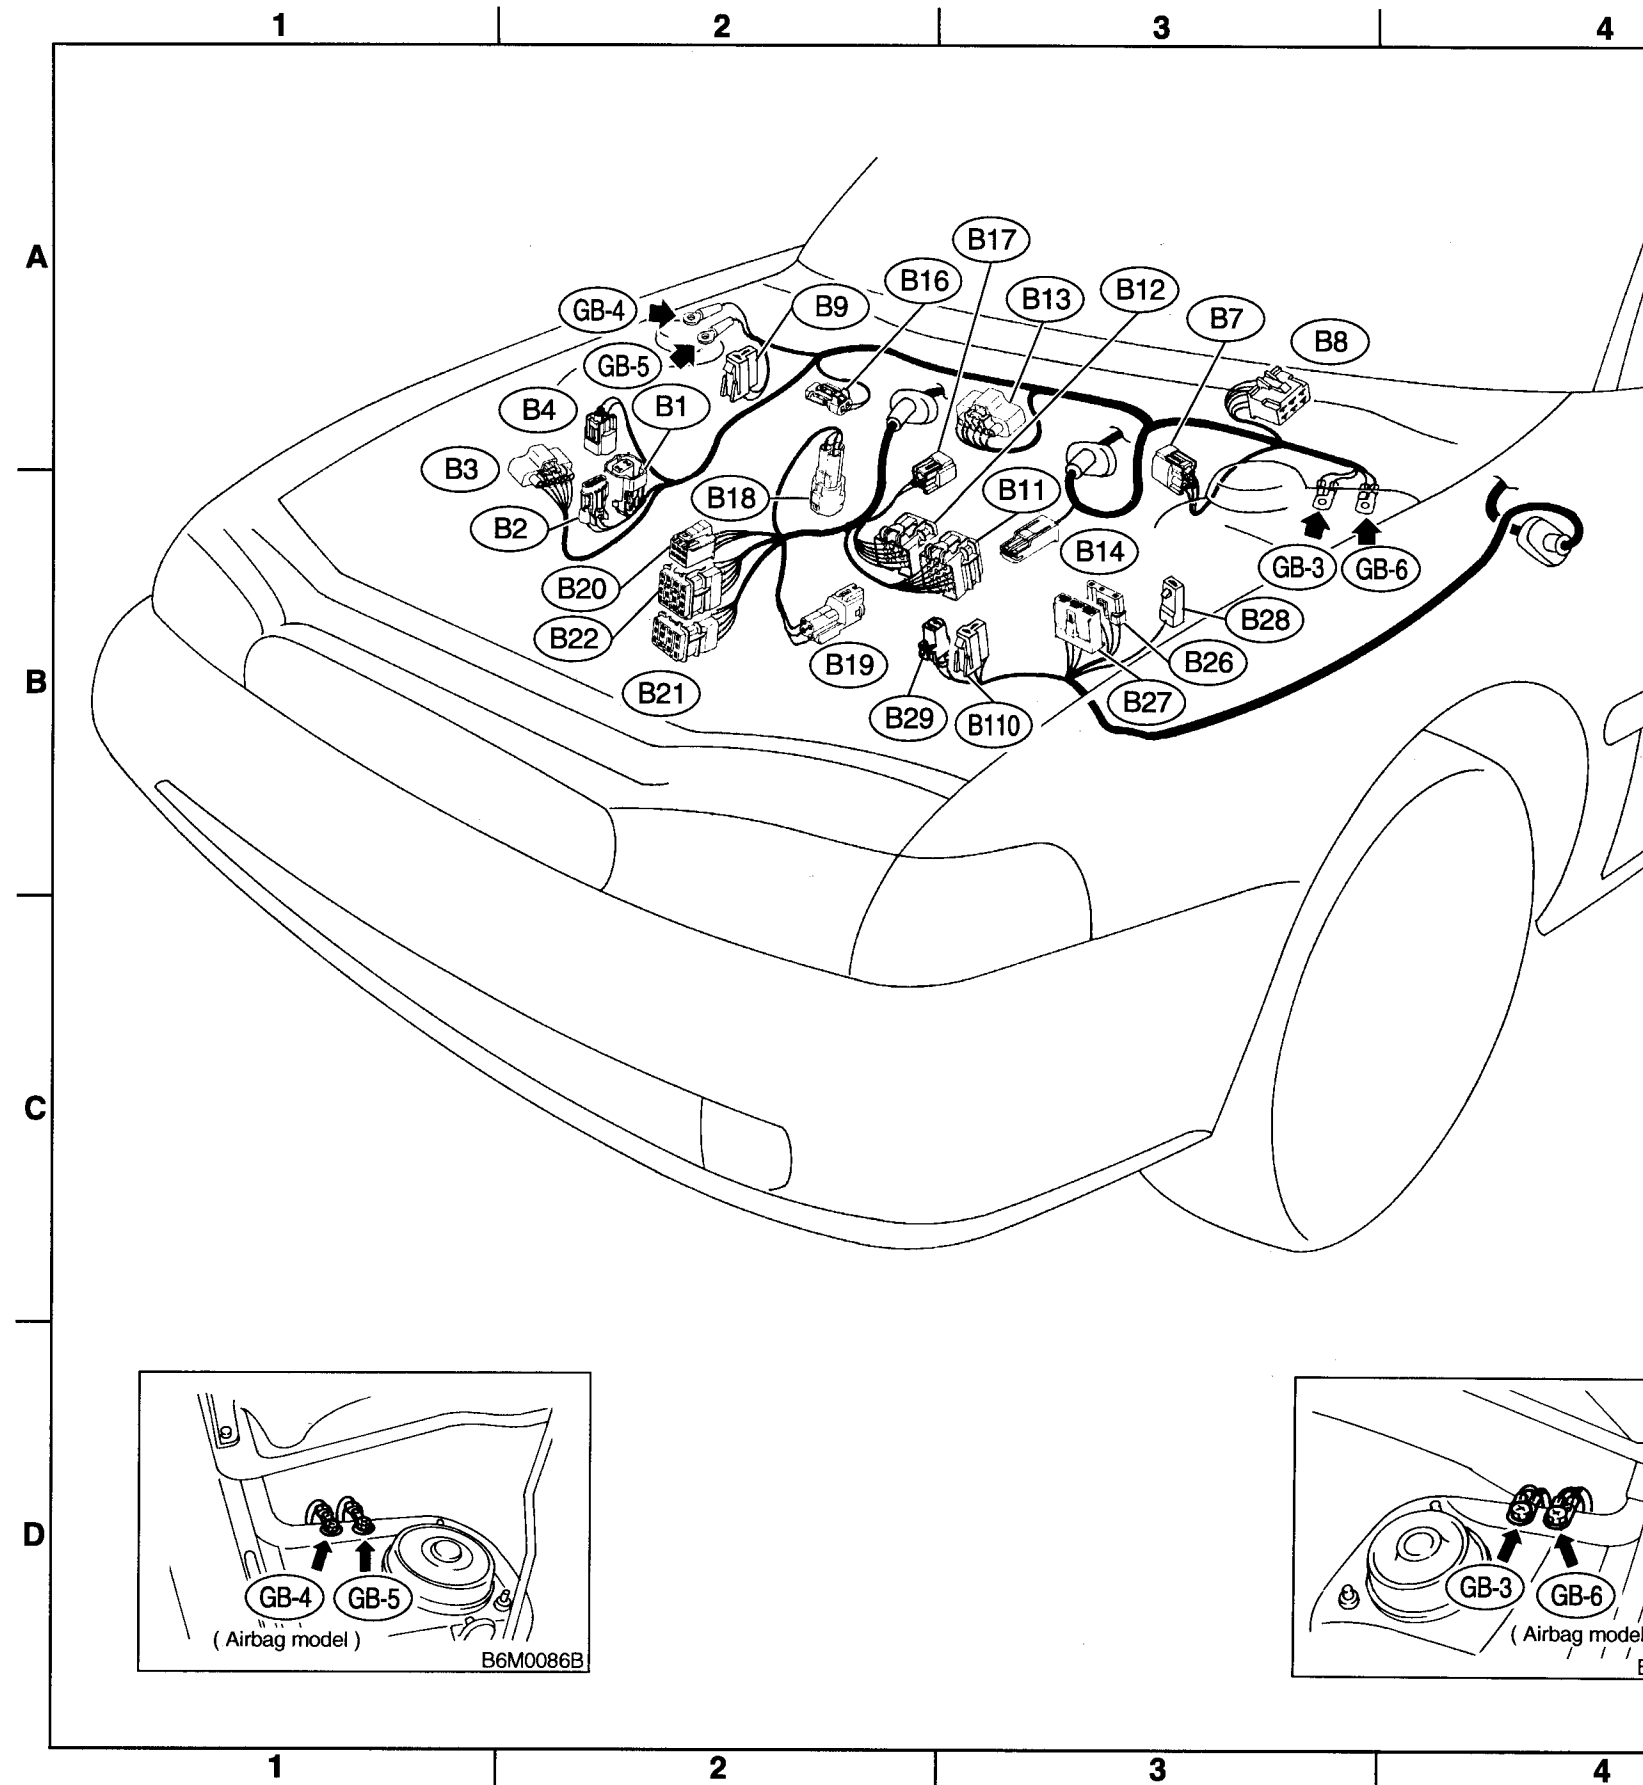

Connecting to			
Area	No.	Name	
C-4	D1	Front door cord RH	
C-4	AB1	SRS (Airbag) harness	
C-4		Turn & hazard module	
C-3	i1	Instrument panel wiring harness	
C-3	i2		
C-3	i3		
C-3	i4		
C-3		OBD-II service connector	
C-3		Power window circuit breaker	
C-3		Power window relay	
C-3		Illumination control module	
C-3		Seat belt timer	
B-4		Fuel pump relay	
B-4		Main relay	
B-4		Horn relay	
B-4		Blower relay	
C-4		F/B	
C-4		Shield joint connector (AT)	
B-3		Transmission control module	
B-3			
B-3		Shift-lock control module	
B-4	F44	Front wiring harness	
B-4	F45		
B-3		Stop light switch	
B-3		Stop & brake switch (With cruise control)	
B-3		Cruise control sub switch	

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B69	11	Black	C-3		Combination switch
B70	9	*	C-3		
B71	8	*	B-3		
B72	6	Black	C-3		Ignition switch
B73	2	Black	B-3		Key lock solenoid
B74	2	Black	B-3		Key warning switch
B75	2	Green	B-2	B76	Test mode connector
B76	2	Green	B-2	B75	
B77	7	*	B-2		Mode actuator
B78	9	Yellow	B-2		Data link connector
B79	14	Gray	C-2		Check connector
B80	4	Blue	B-2	i20	Instrument panel wiring harness
B81	1 x 2	*	B-2		Diagnosis terminal (Ground)
B82	6	Black	B-2		Diagnosis connector
B83	4	*	C-1		Shield joint connector (E/G)
B84	96	Light blue	C-2		Engine control module
B85	4	Brown	B-3		Diode (Lighting)
B86	4	Black	B-1		Blower motor resistor
B87	2	Black	B-1		Blower motor
B88	3	Black	B-1		Evaporator thermoswitch
B90	2	Green	B-4	R50	Room light cord
B91	5	*	B-1		FRESH/RECIRC actuator
B92	8	*	B-1		Door lock timer
B94	20	Black	B-1		Cruise control module
B97	56	*	B-4	R1	Rear wiring harness (S.M.J.)
B101	24	*	B-1	D11	Front door cord LH
B111	3	Gray	C-4		F/B

*: Non-colored

4. BULKHEAD WIRING HARNESS (IN COMPARTMENT)



