
## 3. Cylinder Head and Valve Assembly

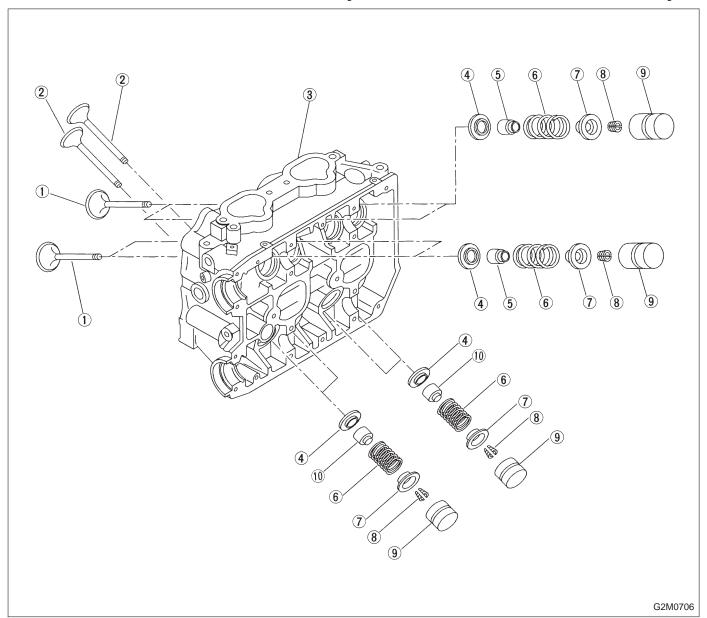

- Exhaust valve
- Intake valve
- Cylinder head
- 4 Valve spring seat
- ⑤ Intake valve oil seal
- 6 Valve spring
- ? Retainer
- Retainer key

- Hydraulic lash adjuster
- Exhaust valve oil seal

Tightening torque: N·m (kg-m, ft-lb) T1: 5 (0.5, 3.6) T2: 12 (1.2, 9)