


Horn

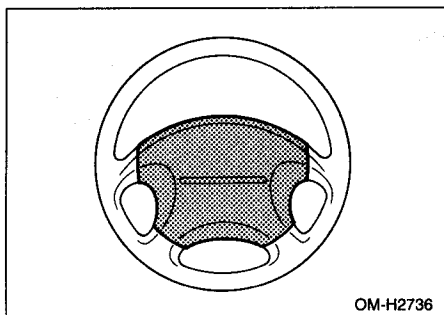


To sound the horn, push the horn pad.

Mirrors

Always check that the inside and outside mirrors are properly adjusted before you start driving.

■ Inside mirror

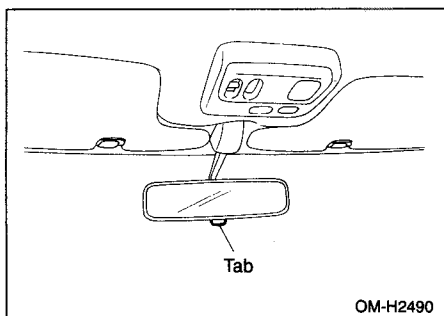

The inside mirror has a day and night position. Pull the tab at the bottom of the mirror toward you for the night position. Push it away for the day position. The night position reduces glare from headlights.

– CONTINUED –


■ Outside mirrors

WARNING

Objects look smaller in a convex mirror (passenger side) and farther away than when viewed in a flat mirror. Do not use the convex mirror to judge the distances of vehicles behind you when changing lanes. Use the inside mirror (or glance backwards) to determine the actual size and distance of objects that you view in the convex mirror.


▼ **Adjusting mirrors**

To adjust the mirrors by hand, push where indicated by the arrows.

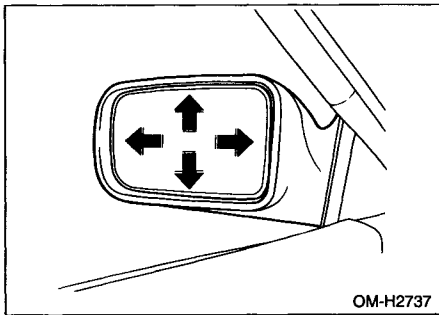

▼ **Remote control mirror switch (if equipped)**

The remote control mirrors operate only when the ignition switch is in the "ON" or "ACC" position.

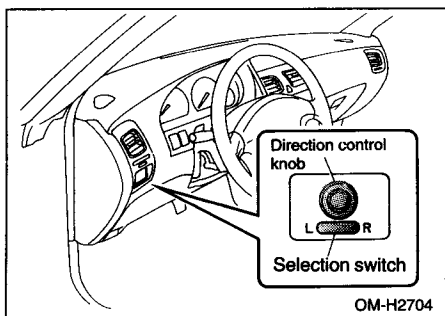


1. Depress either end of the selection switch, "L" for the left and "R" for the right.
2. Move the direction control knob to the direction you want to move the mirror.
3. Return the selection switch to the neutral position to prevent unintentional operation.

The mirrors can also be adjusted manually.

▼ **Remote control mirror with outside mirror defogger (if equipped)**

The remote control mirrors operate only when the ignition switch is in the "ON" or "ACC" position.

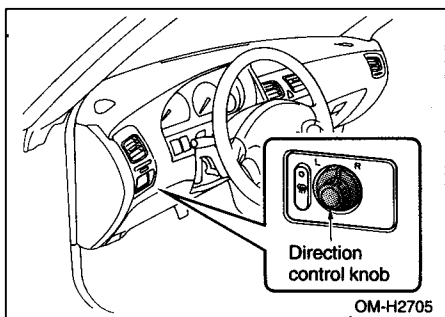

1. Turn the direction control knob to "L" (left side) or "R" (right side)

– CONTINUED –

until it stops.

2. Move the direction control knob to the direction you want to move the mirror.
3. Return the direction control knob to the center position to prevent unintentional operation.


The mirrors can also be adjusted manually.

▼ **Outside mirror defogger (if equipped)**

⚠ CAUTION

To prevent the battery from being discharged, do not operate the defogger continuously longer than necessary.

The outside mirror defogger operates only when the ignition switch is in the "ON" or "ACC" position.

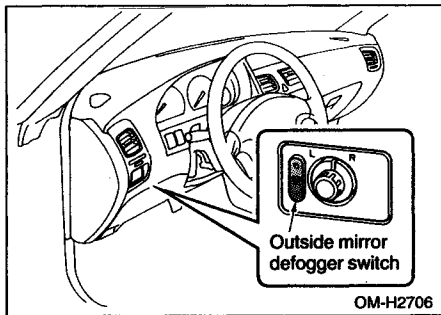

To turn on the outside mirror defogger, push the switch while the engine is running.

The indicator light located on the switch will come on when the outside mirror defogger heater is in operation.

To turn it off, push the switch again.