
3. Electrical Components Location

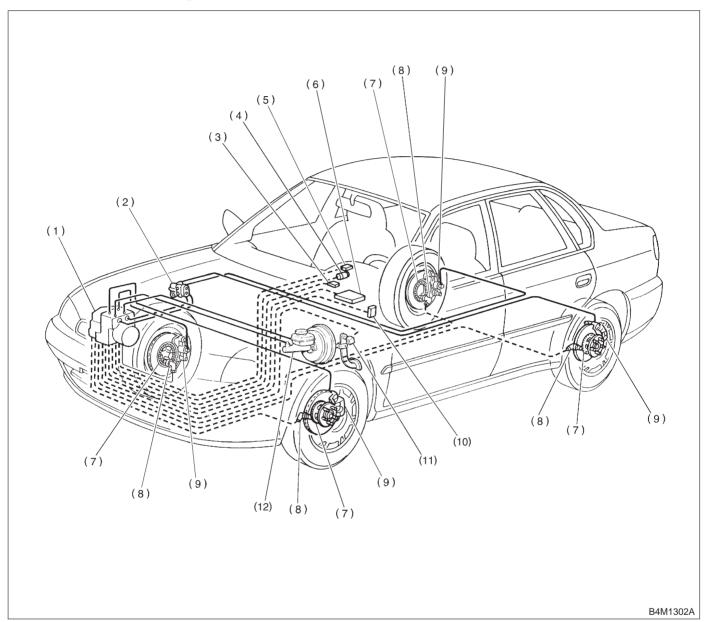

- (1) ABS control module and hydraulic control unit (ABSCM&H/U)
- (2) Proportioning valve
- (3) Diagnosis connector
- (4) ABS warning light

- (5) Data link connector (for Subaru select monitor)
- (6) Transmission control module (only AT vehicle)
- (7) Tone wheel

- (8) ABS sensor
- Wheel cylinder (9)
- (10) G sensor (only AWD vehicle)
- (11) Brake switch
- (12) Master cylinder

[T300] 4-4
3. Electrical Components Location

