1. Engine Cooling System Trouble in General

| Trouble | | Corrective action |
|-----------------------|--|---|
| Over-heating | a. Insufficient engine coolant | Replenish engine coolant, inspect for leakage, and repair. |
| | b. Loose timing belt | Repair or replace timing belt tensioner. |
| | c. Oil on drive belt | Replace. |
| | d. Malfunction of thermostat | Replace. |
| | e. Malfunction of water pump | Replace. |
| | f. Clogged engine coolant passage | Clean. |
| | g. Improper ignition timing | Inspect and repair ignition control system. <ref. 2-7="" [t9d0].="" to=""> On-Board Diagnostics II System</ref.> |
| | h. Clogged or leaking radiator | Clean or repair, or replace. |
| | i. Improper engine oil in engine coolant | Replace engine coolant. |
| | j. Air/fuel mixture ratio too lean | Inspect and repair fuel injection system. <ref. 2-7="" [t600].="" to=""> On-Board Diagnostics II System</ref.> |
| | k. Excessive back pressure in exhaust system | Clean or replace. |
| | I. Insufficient clearance between piston and cylinder | Adjust or replace. |
| | m. Slipping clutch | Repair or replace. |
| | n. Dragging brake | Adjust. |
| | o. Improper transmission oil | Replace. |
| | p. Defective thermostat | Replace. |
| | q. Malfunction of electric fan | Inspect radiator fan relay, engine coolant temperature sensor or radiator motor and replace there. |
| Over-cooling | a. Atmospheric temperature extremely low | Partly cover radiator front area. |
| | b. Defective thermostat | Replace. |
| Engine coolant leaks. | a. Loosened or damaged connecting units on hoses | Repair or replace. |
| | b. Leakage from water pump | Replace. |
| | c. Leakage from water pipe | Repair or replace. |
| | d. Leakage around cylinder head gasket | Retighten cylinder head bolts or replace gasket. |
| | e. Damaged or cracked cylinder head and crank- case | Repair or replace. |
| | f. Damaged or cracked thermostat case | Repair or replace. |
| | g. Leakage from radiator | Repair or replace. |
| Noise | a. Defective drive belt | Replace. |
| | b. Defective radiator fan | Replace. |
| | c. Defective water pump bearing | Replace water pump. |
| | d. Defective water pump mechanical seal | Replace water pump. |