## 1. Foreword

## A: GENERAL

This chapter describes major inspection and service procedures for the engine mounted on the body. For procedures not found in this chapter, refer to the service procedure section in the applicable chapter.

# 2. Ignition Timing

### A: MEASUREMENT

#### **CAUTION:**

After warming-up, engine becomes very hot. Be careful not to burn yourself during measurement.

1) Warm-up the engine.

2) To check the ignition timing, connect a timing light to #1 cylinder spark plug cord, and illuminate the timing mark with the timing light.

3) Start the engine at idle speed and check the ignition timing.


Ignition timing [BTDC/rpm]:

2200 cc California spec. vehicles 15°±8°/700

2200 cc except California spec. vehicles 10°±8°/700 (MT model)

15°±8°/700 (AT model)

#### 2500 cc model 15°±8°/700

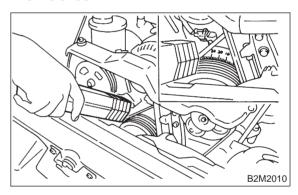

If the timing is not correct, check the ignition control system. <Ref. to 2-7 [T6A0].>