8. Inhibitor Switch S912243

A: REMOVAL S912243A18

1) Disconnect ground cable from battery.


2) Disconnect connector from inhibitor switch, and then remove the switch. <Ref. to AT-30, REMOVAL, Inhibitor Switch.>

B: INSTALLATION S912243A11

Installation is in the reverse order of removal.

C: INSPECTION S912243A10

Measure inhibitor switch resistance.

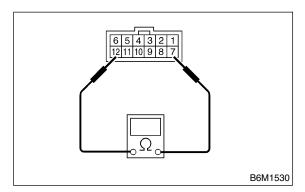

Selector lever position	Terminal No.	Standard
Р		Less than 1 Ω
N	7 and 12	Less than 1 Ω
Except P and N		More than 1 $M\Omega$

If NG, replace inhibitor switch.

INHIBITOR SWITCH

MEMO: