


8. Trunk Lid Panel S913365

A: REMOVAL S913365A18

1. TRUNK LID S913365A1801

- 1) Open trunk lid.
- 2) Disconnect trunk lid connector.
- 3) Loosen trunk lid mounting bolts to remove trunk lid from hinges.

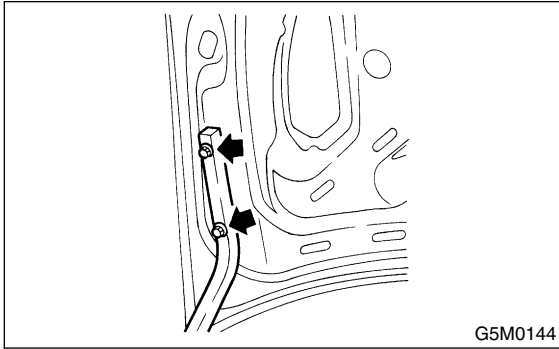


2. TORSION BAR S913365A1802

- 1) Open trunk lid.
- 2) Using special tool, remove torsion bar from hinge link.
ST 927780000 REMOVER

CAUTION:

During removal and installation, carefully handle torsion bar. It will generate reactive force.

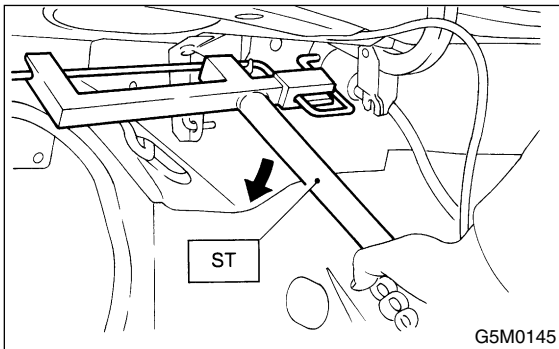

- 3) Remove right/left torsion bars.

CAUTION:

After the torsion bar is removed, the trunk lid will slam shut. Be careful not to get hit by the trunk lid.

B: INSTALLATION S913365A11

1. TRUNK LID S913365A1101

- 1) Install in the reverse order of removal.
- 2) Install trunk lid with uniform clearance.

2. TORSION BAR S913365A1102

- 1) Install in the reverse order of removal.
- 2) Apply grease to rotating area of hinges and mating surface of torsion bar.

Tightening torque:

18 N·m (1.8 kgf-m, 13.0 ft-lb)