


14. Front Fog Light Bulb S914428


A: REMOVAL S914428A18

1. EXCEPT OUTBACK S914428A1801

- 1) Disconnect ground cable from battery.
- 2) Remove the two clips and lower the mudguard.

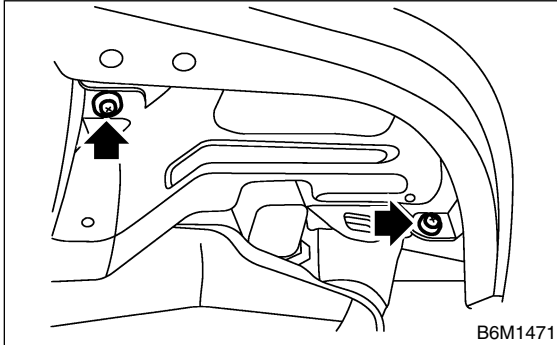

- 3) Remove back cover (A).

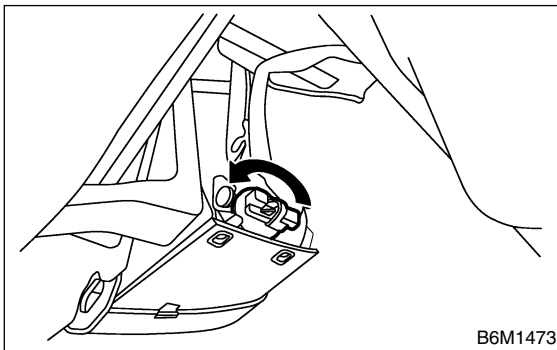

- 4) Disconnect harness connector.
- 5) Remove spring retainer then detach fog light bulb.

2. OUTBACK S914428A1802

- 1) Remove fog light assembly. <Ref. to LI-16, OUTBACK, REMOVAL, Front Fog Light Assembly.>
- 2) Disconnect harness connector.
- 3) Loosen screws and turn the bulb assembly counterclockwise, and then detach the bulb.

B: INSTALLATION S914428A11

Install in the reverse order of removal.

C: INSPECTION S914428A10

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.