


22. Spot Light S914398

A: REMOVAL S914398A18

- 1) Disconnect ground cable from battery.
- 2) Remove lens (A) and spot light mounting screw (B).

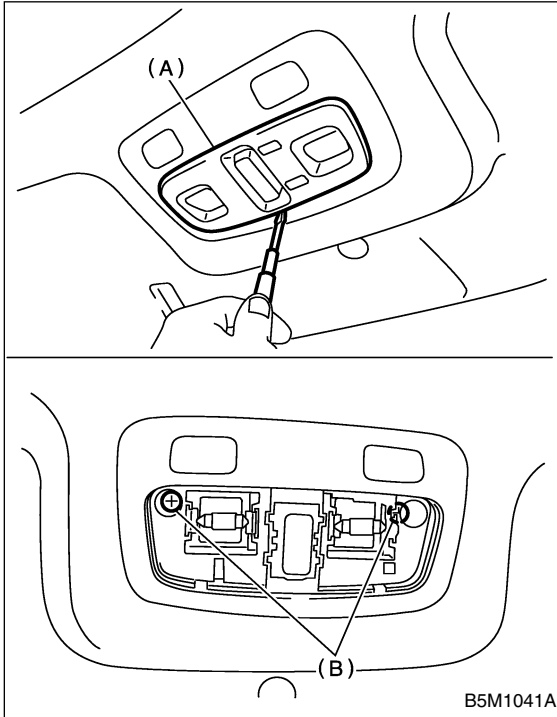

- 3) Disconnect harness connectors and remove spot light.

B: INSTALLATION S914398A11

Install in the reverse order of removal.

C: INSPECTION S914398A10

1. SPOT LIGHT BULB S914398A1001

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.

2. SPOT LIGHT SWITCH S914398A1002

Measure spot light resistance.

Switch position	Terminal No.	Standard
OFF	—	More than 1 MΩ
ON	1 and 2	1.5±0.5 Ω