


## 26. Keyless Entry Control Module

S909324

### A: REMOVAL

S909324A18

- 1) Disconnect ground cable from battery.
- 2) Remove glove box. <Ref. to EI-34, REMOVAL, Glove Box.>
- 3) Remove nut, then remove keyless entry control module (B) and the other electrical control module (A) while disconnecting connector.

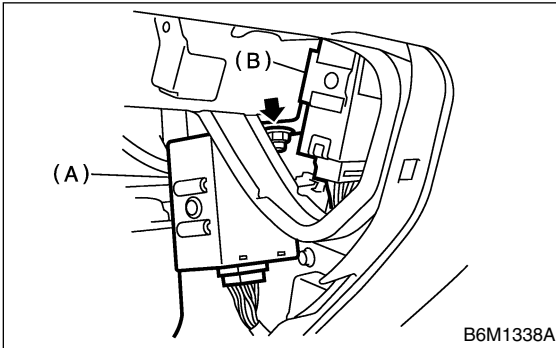

- 4) Disconnect keyless entry control module and the other electrical control module.

### B: INSTALLATION

S909324A11

Install in the reverse order of removal.