
3. Combination Switch (Wiper)


S902395

A: REMOVAL S902395A18

1) Loosen screw to remove a steering column cover.

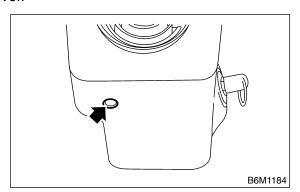

- 2) Disconnect connectors from combination switch.
- 3) Loosen screw to remove combination switch.

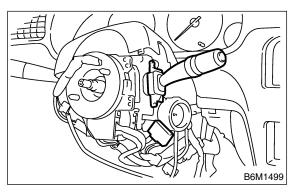


B: INSTALLATION S902395A11

Install in the reverse order of removal.

C: INSPECTION S902395A10

• Inspect the continuity between each connector terminal.

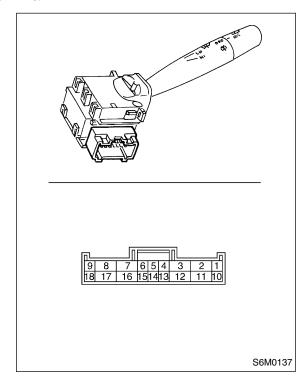


	Switch position	Terminal No.	Standard
FRONT	OFF	7 and 16 7 and 17 8 and 17 2 and 11	More than 1 MΩ
	INT	7 and 16	Less than 1 Ω
	LO	7 and 17	Less than 1 Ω
	HI	8 and 17	Less than 1 Ω
	Washer ON	2 and 11	Less than 1 Ω
REAR	Washer ON	2 and 10 10 and 12 2 and 12	Less than 1 Ω
	OFF	2 and 10 10 and 12 2 and 12	More than 1 MΩ
	ON	2 and 10	Less than 1 Ω
	Washer ON	2 and 10 10 and 12 2 and 12	Less than 1 Ω

If continuity is not as specified, replace the switch.

COMBINATION SWITCH (WIPER)

Wiper and Washer Systems

- Intermittent operation inspection
- 1) Turn the wiper switch to INT.
- 2) Adjust the intermittent control switch to MAX.
- 3) Apply battery voltage to switch terminals 17 and 2, and inspect the voltage of terminals 7 and 2. (Measure the voltage from after the second time the wiper stops.)

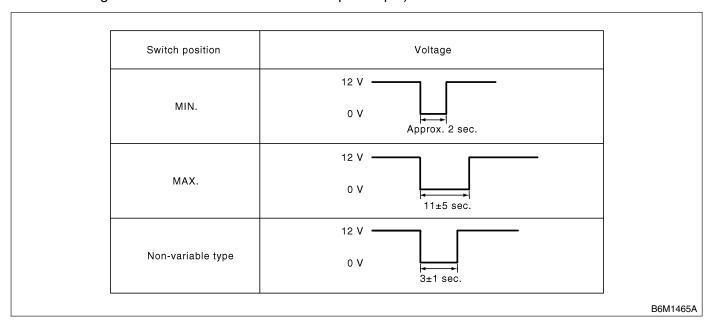

If operation is not as specified, replace the switch.