


REAR WIPER MOTOR


10. Rear Wiper Motor S902532

A: REMOVAL S902532A18

- 1) Remove rear wiper arm.
- 2) Remove cap (A), nut (B), and spacer (C) from rear wiper shaft.

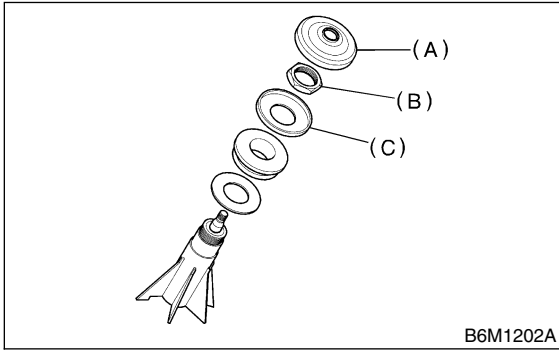


- 3) Remove rear gate lower trim. <Ref. to EI-49, REMOVAL, Rear Gate Trim.>
- 4) Remove harness clip and disconnect wiper motor connector.
- 5) Loosen bolts to remove wiper motor assembly (A).

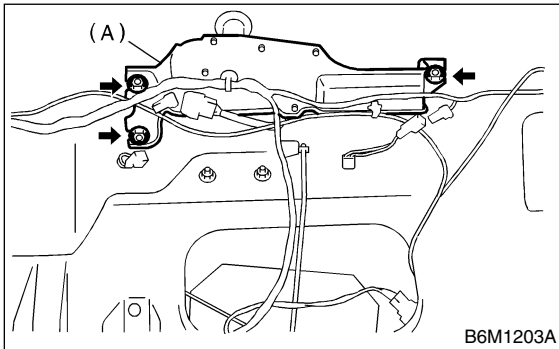

B: INSTALLATION S902532A11

- 1) Install in the reverse order of removal.
- 2) Install rear wiper cushion with the arrow mark facing up, as shown in the figure.

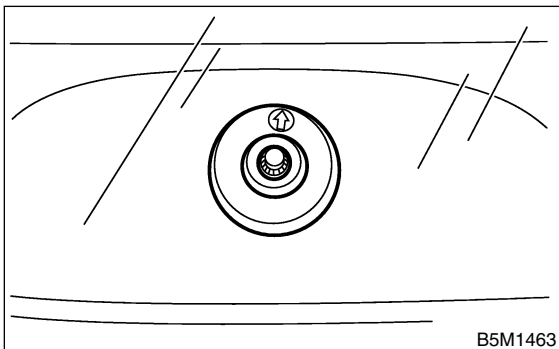


Tightening torque:


Refer to **COMPONENT** in **General Description**. <Ref. to **WW-3, REAR WIPER, COMPONENT, General Description**.>

C: INSPECTION S902532A10

- 1) Connect battery to wiper motor connector and confirm that wiper motor operates.

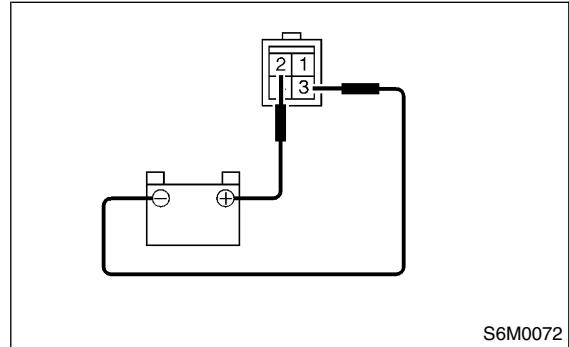

- 2) Connect battery to terminal of connector and remove terminal connections with motor rotated, and stop wiper motor through operation.

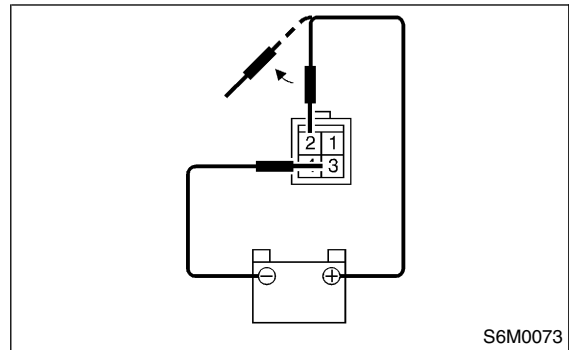

- 3) Connect battery and confirm that motor stops at automatic stop position after motor operates at low speed again.

