



4. Air Intake Duct S174566

A: REMOVAL S174566A18


1) Remove bolts which install air intake duct on the front side of body.

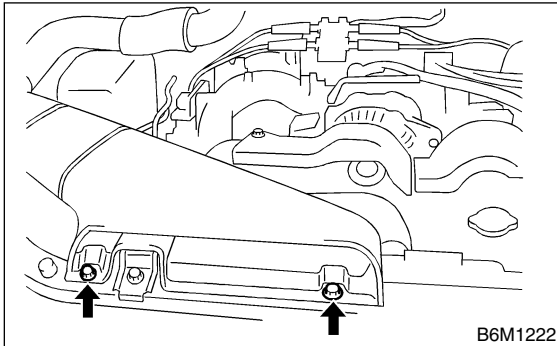

2) Remove bolt which installs air intake duct on body.

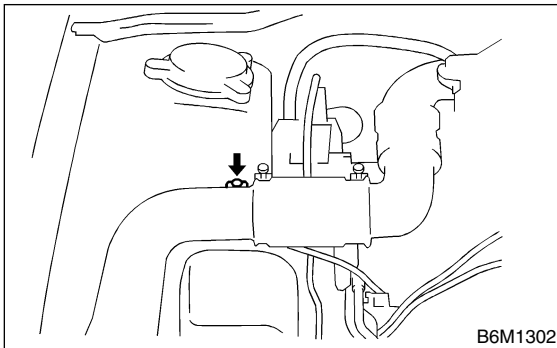

3) Remove air intake ducts as a unit.

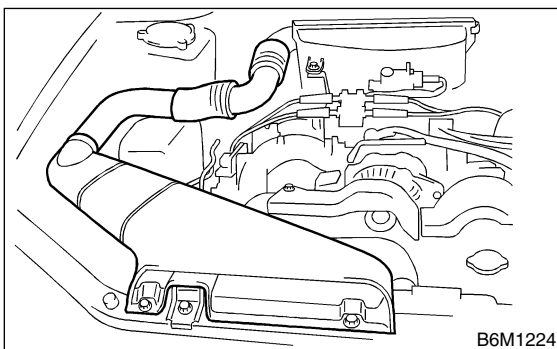

B: INSTALLATION S174566A11

Install in the reverse order of removal.

C: INSPECTION S174566A10

Inspect for cracks and loose connections. Check that no foreign objects are mixed in the air intake duct.