


11. Reservoir Tank S146075

A: REMOVAL S146075A18

- 1) Disconnect over flow hose from radiator filler neck position.
- 2) Remove bolts which install reservoir tank onto radiator main fan shroud.
- 3) Remove reservoir tank.

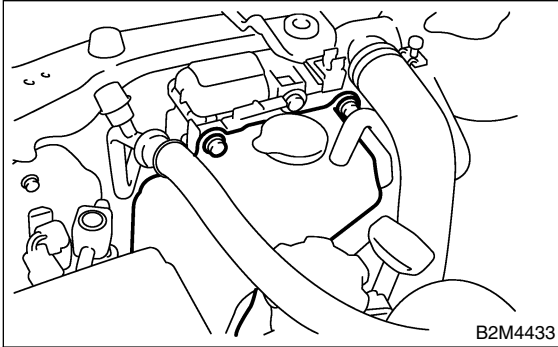


B: INSTALLATION S146075A11

Install in the reverse order of removal.

Tightening torque:

4.9N·m (0.50 kgf·m, 3.6 ft·lb)

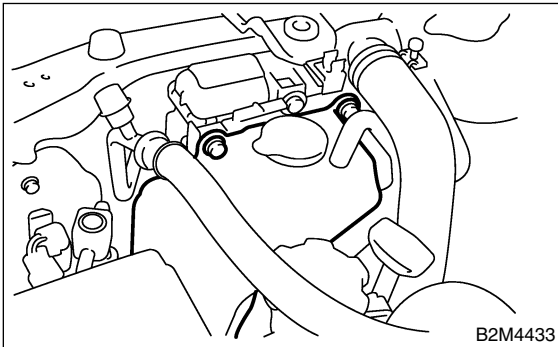

C: INSPECTION S146075A10

Make sure the engine coolant level is between full and low.