



## 2. Air Cleaner S144087

### A: REMOVAL S144087A18

- 1) Loosen clamp (A), and separate air cleaner upper cover and air intake boot.
- 2) Remove the clip (B) above the air cleaner upper cover.

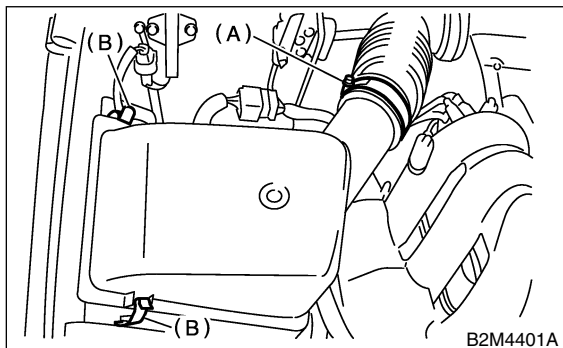

- 3) Remove air cleaner upper cover and air cleaner element.
- 4) Remove air cleaner lower case.

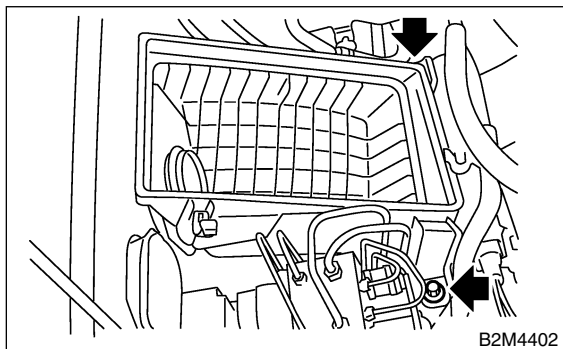


### B: INSTALLATION S144087A11

- 1) Install the air cleaner lower case element.

**Tightening torque:**


**32 N·m (3.3 kgf·m, 24 ft-lb)**

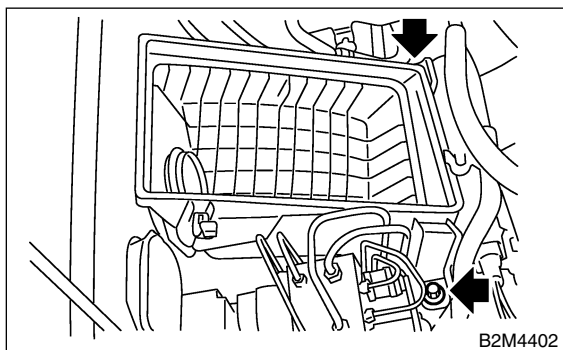


- 2) Set the air cleaner element.
- 3) Install the air cleaner upper cover.

**NOTE:**

Before installing air cleaner upper cover, align holes with protruding portions of air cleaner lower case, then secure upper cover to lower case.

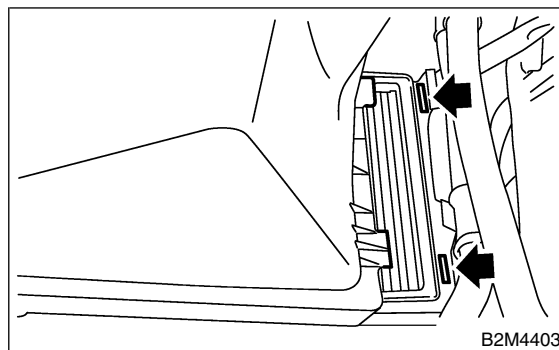

- 4) Install the clip (B) above the air cleaner upper cover.
- 5) Tighten clamp (A), and connect air intake boot and air cleaner upper cover.

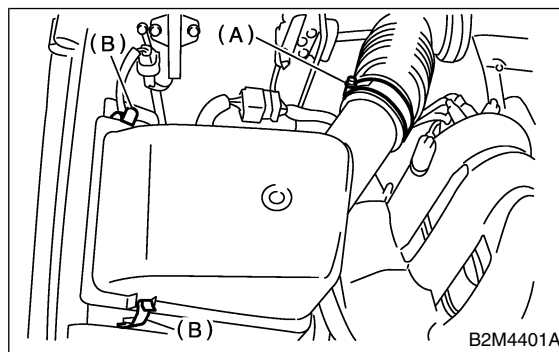

### C: INSPECTION S144087A10

Replace if excessively damaged or dirty.