


# RESONATOR CHAMBER

Intake (Induction)


## 5. Resonator Chamber S144639

### A: REMOVAL S144639A18

- 1) Set vehicle on a lift.
- 2) Remove air intake duct. <Ref. to IN(H6)-7, REMOVAL, Air Intake Duct.>
- 3) Remove air cleaner lower case. <Ref. to IN(H6)-5, REMOVAL, Air Cleaner.>
- 4) Remove the resonator chamber mounting bolt on the right of engine compartment.

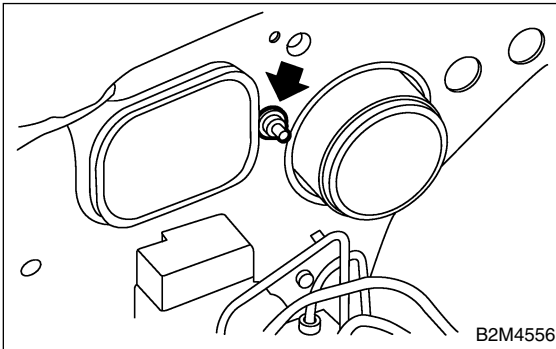

- 5) Remove the front right tire, and lift the vehicle.
- 6) Remove front mudguard RH.
- 7) Remove the resonator chamber (A) from the inside front fender.

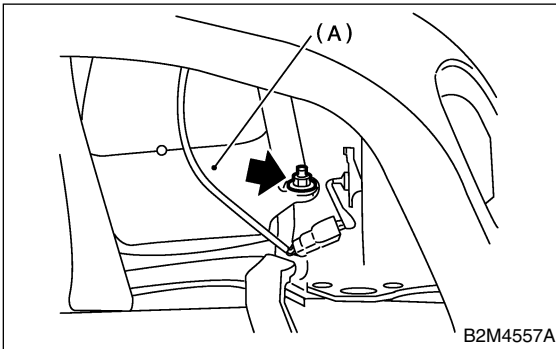

### B: INSTALLATION S144639A11

Install in the reverse order of removal.

#### **Tightening torque:**

**7.5 N·m (0.76 kgf·m, 5.5 ft·lb)**

### C: INSPECTION S144639A10

Inspect for cracks and loose connections. Check that no foreign objects and mixed in the resonator chamber.