

# 3. Front Seat Belt S801303

## A: REMOVAL S801303A18


# 1. OUTER BELT (FRONT) S801303A1801

- 1) Fold backrest all the way forward, and then move front seat all the way forward.
- 2) Turn ignition switch OFF, disconnect ground cable from battery, and wait for more than 20 seconds before starting work.
- 3) Remove center pillar lower trim. <Ref. to EI-43, REMOVAL, Inner Trim Panel.>
- 4) Remove webbing guide.

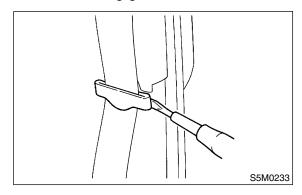


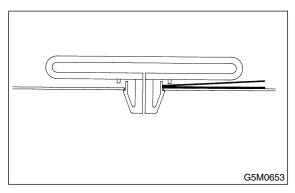

5) Remove anchor cover. Loosen shoulder anchor bolt, and then detach shoulder anchor from center pillar.

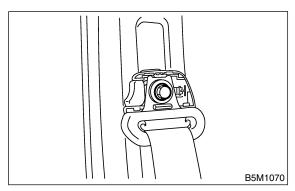

6) Turn over the floor mat to remove bolt.

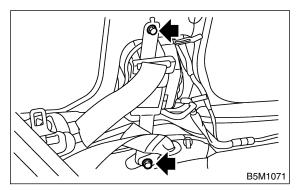


7) Disconnect yellow connector of pretensioner harness, and remove outer belt (front).

### **CAUTION:**

- Do not drop or apply any impact to pretensioner.
- Pretensioner and bracket should be treated as an assembly. Do not attempt to disassemble it.

## 2. INNER BELT (FRONT) S801303A1802

- 1) Disconnect connector.
- 2) Remove anchor bolt, and then detach inner belt.

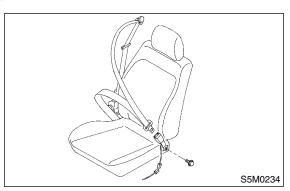

### B: INSTALLATION S801303A11

## 1. OUTER BELT (FRONT) S801303A1101

Install in the reverse order of removal.

#### **CAUTION:**

- The parts on left and right are not identical. Before installation, make sure that the correct part is used.
- Be careful not to twist belts during installation.

### 2. INNER BELT (FRONT) S801303A1102

Install in the reverse order of removal.

### Tightening torque:

Refer to COMPONENT in General Description.
<Ref. to SB-2, FRONT SEAT BELT, COMPONENT, General Description.>

### C: INSPECTION S801303A10

## 1. OUTER BELT (FRONT) S801303A1001

Check for the following, and replace with new parts if necessary.

- Pretensioner is cracked or deformed.
- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

## 2. INNER BELT (FRONT) S801303A1002

Check for the following, and replace with new parts if necessary.

- Inner belt is deformed or damaged.
- Seat belt buckle is engaged improperly.