

WHEEL ALIGNMENT

Rear Suspension

2. Wheel Alignment S201116

A: INSPECTION S201116A10

NOTE:

The front and rear wheel alignment must be measured and/or adjusted at once to obtain accuracy. Measure and/or adjust the rear wheel alignment together with the front.

Follow the procedure in “FS” section “Wheel Alignment” for measurement and/or adjustment of wheel alignment. <Ref. to FS-6, Wheel Alignment.>