



3. Rear Stabilizer S201118

A: REMOVAL S201118A18

- 1) Jack-up the rear part of the vehicle, support it with safety stands (rigid racks).
- 2) Remove bolts which secure stabilizer link to rear arm.

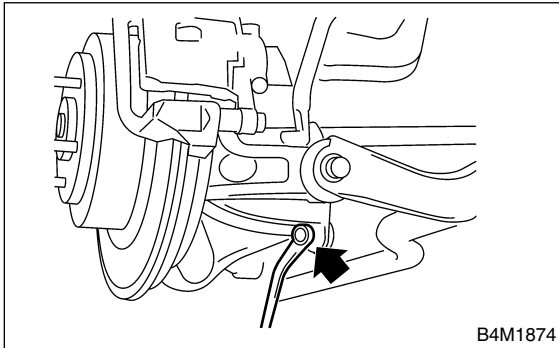

- 3) Remove bolts which secure stabilizer to sub frame.

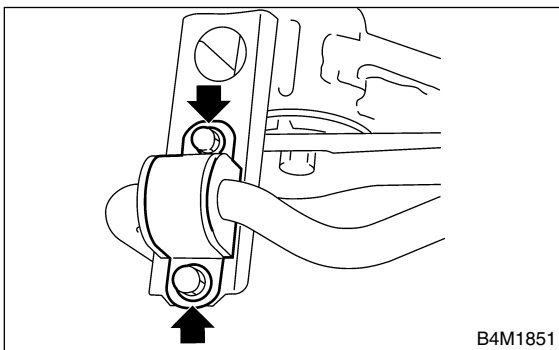

B: INSTALLATION S201118A11

Install in the reverse order of removal.

Tightening torque:

Stabilizer link to rear arm

44 N·m (4.5 kgf-m, 32.5 ft-lb)

Clamp to sub frame

40 N·m (4.1 kgf-m, 30 ft-lb)

C: INSPECTION S201118A10

- 1) Check bushing for cracks, fatigue or damage.
- 2) Check stabilizer links for deformities, cracks, or damage, and bushing for protrusions from the hole of stabilizer link.