


LINK FRONT

Rear Suspension

7. Link Front S201106


A: REMOVAL S201106A18

- 1) Loosen wheel nuts. Lift-up vehicle and remove wheel.
- 2) Use transmission jack to support rear arm horizontally.

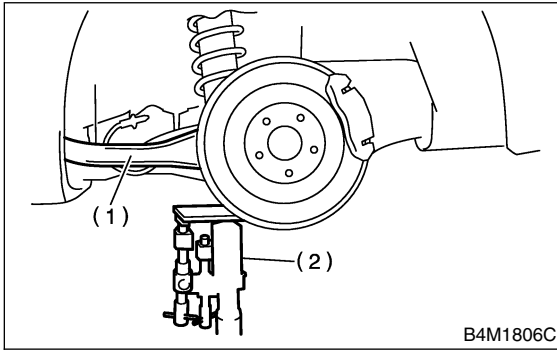


- (1) Rear arm
- (2) Transmission jack

- 3) Remove bolt securing link front to sub frame.

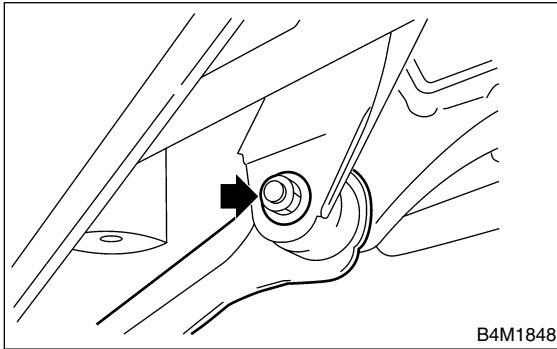

- 4) Remove bolts which secure link front to rear arm and detach link front.

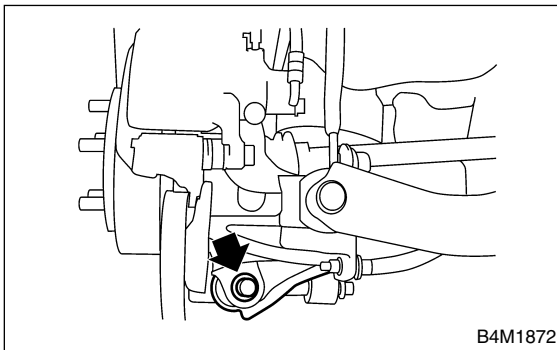


NOTE:
Link front bushing cannot be replaced alone.
Always replace link front and bushing as a single unit.

B: INSTALLATION S201106A11

Install in the reverse order of removal, observing the following instructions.


CAUTION:

- Using transmission jack, support rear arm horizontally, install link front and tighten nuts to specified torque.

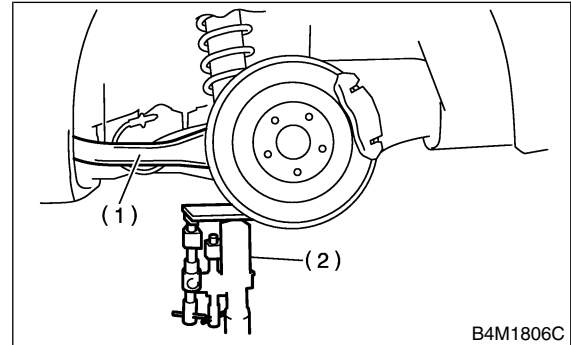

- (1) Rear arm
- (2) Transmission jack

- Install link front with protruded side facing front.

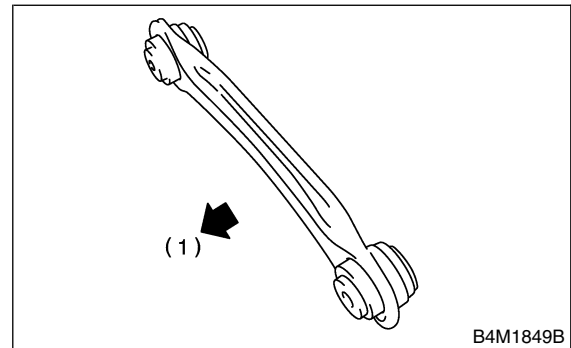

- (1) Front

- Replace self-locking nut.

NOTE:
Check wheel alignment and adjust if necessary.

C: INSPECTION S201106A10

Visually check link front for damage or bends.