


## HEATER BLOWER RESISTOR

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

### 9. Heater Blower Resistor

#### A: REMOVAL

- 1) Remove glove box. <Ref. to EI-34, REMOVAL, Glove Box.>
- 2) Disconnect power transistor connector.
- 3) Loosen 2 screws to remove power transistor.

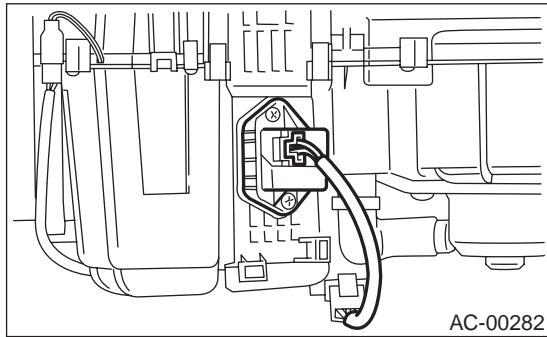


#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

##### 1. MANUAL A/C

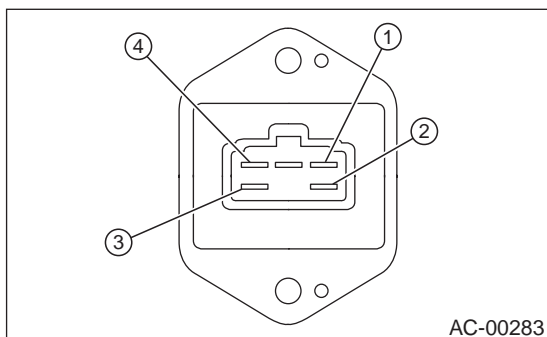

Measure switch resistance.

Terminal No.	Condition	Standard
4 and 3	Constant	Approx. 0.46 $\Omega$
3 and 2	Constant	Approx. 0.85 $\Omega$
2 and 1	Constant	Approx. 1.77 $\Omega$

If NG, replace the blower resistor.