


RELAY AND FUSE

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

17. Relay and Fuse

A: LOCATION

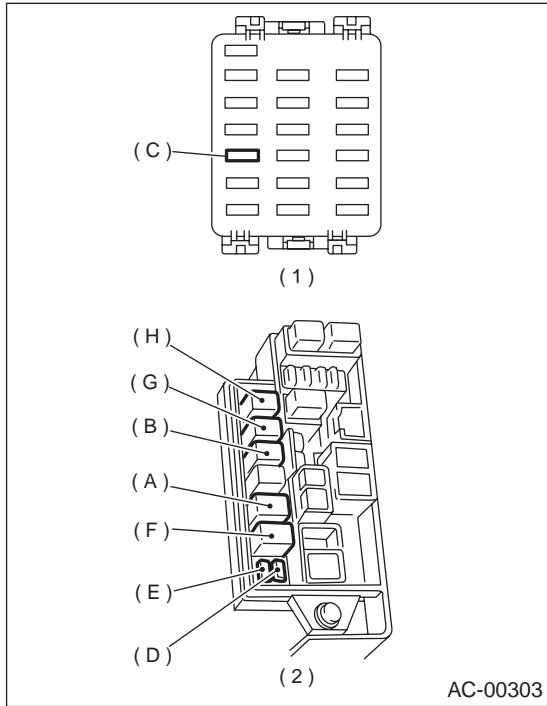


- (1) Joint box
 (2) Main fuse box

	4 cylinder engine model	6 cylinder engine model
Main fan relay	F	—
Sub fan relay	B	—
A/C relay	A	A
Main fan relay 1	—	F
Sub fan relay 1	—	G
Main fan relay 2	—	B
Sub fan relay 2	—	H
A/C fuse	C	C
Main fan fuse	E (20 A)	E (30 A)
Sub fan fuse	D (20 A)	D (30 A)

RELAY AND FUSE

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

B: INSPECTION

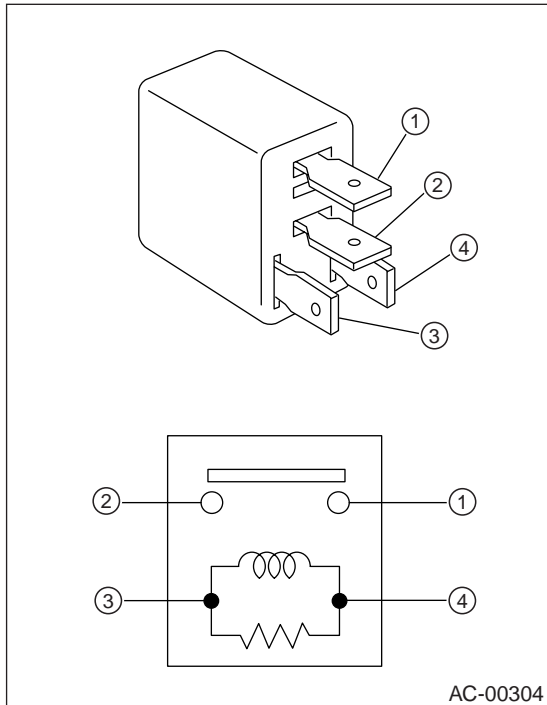

(3) — (4): Continuity exists.

(1) — (2): No continuity

While applying battery voltage to the cable between (3) and (4), check continuity between (1) and (2).

If no continuity exists, replace the relay with a new one.