



2004 LEGACY & OUTBACK OWNER'S MANUAL



Always wear your seatbelt.



Foreword

Congratulations on choosing a SUBARU vehicle. This Owner's Manual has all the information necessary to keep your SUBARU in excellent condition and to properly maintain the emission control system for minimizing emission pollutants. We urge you to read this manual carefully so that you may understand your vehicle and its operation. For information not found in this Owner's Manual, such as details concerning repairs or adjustments, please contact the dealer from whom you purchased your SUBARU or the nearest SUBARU dealer.

The information, specifications and illustrations found in this manual are those in effect at the time of printing. FUJI HEAVY INDUSTRIES LTD. reserves the right to change specifications and designs at any time without prior notice and without incurring any obligation to make the same or similar changes on vehicles previously sold. This Owner's Manual applies to all models and covers all equipment, including factory installed options. Some explanations, therefore may be for equipment not installed in your vehicle.

Please leave this manual in the vehicle at the time of resale. The next owner will need the information found herein.

 
FUJI HEAVY INDUSTRIES LTD., TOKYO, JAPAN

 **SUBARU** and  are registered trademarks of FUJI HEAVY INDUSTRIES, LTD.


© copyright 2003 FUJI HEAVY INDUSTRIES LTD.

This manual describes the following types of the Legacy series.


Legacy Sedan

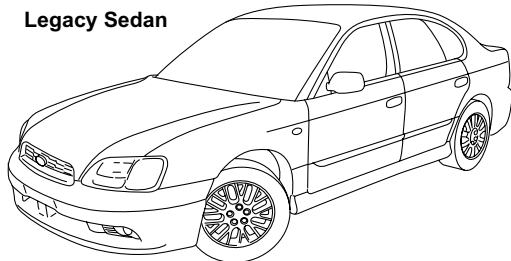


OUTBACK Sedan

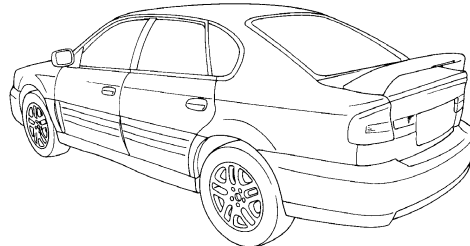 

Legacy Station Wagon

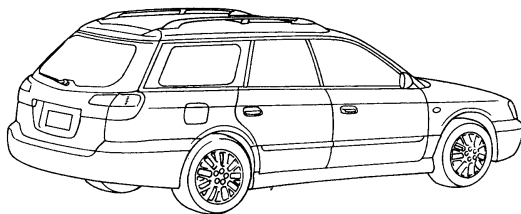 

OUTBACK Station Wagon

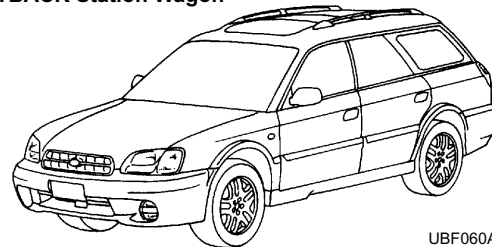 

UBF060AB

Warranties

■ Warranties for U.S.A.

All SUBARU vehicles distributed by Subaru of America, Inc. and sold at retail by an authorized SUBARU dealer in the United States come with the following warranties:

- SUBARU Limited Warranty
- Emission Control Systems Warranty
- Emissions Performance Warranty

All warranty information, including details of coverage and exclusions, is in the "Warranty and Maintenance Booklet". Please read these warranties carefully.

▼ Warranties for Canada

All SUBARU vehicles distributed by Subaru Canada, Inc. and sold at retail by an authorized SUBARU dealer in Canada come with the following warranties:

- SUBARU Limited Warranty
- Anti-Corrosion Warranty
- Emission Control Warranty

All warranty information, including details of coverage and exclusions, is in the "Warranty and Service Booklet". Please read these warranties carefully.

NOTE

This vehicle does not contain mercury devices or parts.

How to use this owner's manual

■ Using your Owner's manual

Before you operate your vehicle, carefully read this manual. To protect yourself and extend the service life of your vehicle, follow the instructions in this manual. Failure to observe these instructions may result in serious injury and damage to your vehicle.

This manual is composed of fourteen chapters. Each chapter begins with a brief table of contents, so you can usually tell at a glance if that chapter contains the information you want.

Chapter 1: Seat, seatbelt and SRS airbags

This chapter informs you how to use the seat and seatbelt and contains precautions for the SRS airbags.

Chapter 2: Keys and doors

This chapter informs you how to operate the keys, locks and windows.

Chapter 3: Instruments and controls

This chapter informs you about the operation of instrument panel indicators and how to use the instruments and other switches.

Chapter 4: Climate control

This chapter informs you how to operate the climate control.

Chapter 5: Audio

This chapter informs you how to operate your audio system.

Chapter 6: Interior equipment

This chapter informs you how to operate interior equipment.

Chapter 7: Starting and operating

This chapter informs you how to start and operate your SUBARU.

Chapter 8: Driving tips

This chapter informs you how to drive your SUBARU in various conditions and explains some safety tips on driving.

Chapter 9: In case of emergency

This chapter informs you what to do if you have a problem while driving, such as a flat tire or engine overheating.

Chapter 10: Appearance care

This chapter informs you how to keep your SUBARU looking good.

Chapter 11: Maintenance and service

This chapter informs you when you need to take your SUBARU to the dealer for scheduled maintenance and informs you how to keep your SUBARU running properly.

Chapter 12: Specifications

This chapter informs you about dimension and capacities of your SUBARU.

Chapter 13: Consumer information and Reporting safety defects

This chapter informs you about Tire information, Uniform tire quality grading standards and Reporting safety defects.

Chapter 14: Index

This is an alphabetical listing of all that's in this manual. You can use it to quickly find something you want to read.

■ Safety warnings

You will find a number of WARNINGS, CAUTIONs and NOTES in this manual.

These safety warnings alert you to potential hazards that could result in injury to you or others.

Please read these safety warnings as well as all other portions of this manual carefully in order to gain a better understanding of how to use your SUBARU vehicle safely.

WARNING

A WARNING indicates a situation in which serious injury or death could result if the warning is ignored.

 
CAUTION

A CAUTION indicates a situation in which injury or damage to your vehicle, or both, could result if the caution is ignored.

NOTE

A NOTE gives information or suggestions how to make better use of your vehicle.

■ Safety symbol

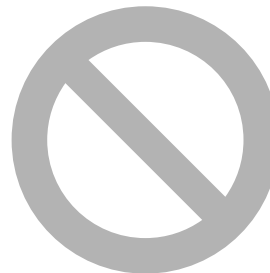

HSF019AA

You will find a circle with a slash through it in this man-

– CONTINUED –

ual. This symbol means “Do not”, “Do not do this”, or “Do not let this happen”, depending upon the context.

Safety precautions when driving

■ Seatbelt and SRS airbag

WARNING

- All persons in the vehicle should fasten their seatbelts **BEFORE** the vehicle starts to move. Otherwise, the possibility of serious injury becomes greater in the event of a sudden stop or accident.
- To obtain maximum protection in the event of an accident, the driver and all passengers in the vehicle should always wear seatbelts when the vehicle is moving. The SRS (Supplemental Restraint System) airbag does not do away with the need to fasten seatbelts. In combination with the seatbelts, it offers the best combined protection in case of a serious accident. Not wearing a seatbelt increases the chance of severe injury or death in a crash even when the car has the SRS airbag.
- The SRS airbags deploy with considerable speed and force. Occupants who are out of proper position when the SRS airbag deploys could suffer very serious injuries. Because the SRS airbag needs enough space for deploy-

ment, the driver should always sit upright and well back in the seat as far from the steering wheel as practical while still maintaining full vehicle control and the front passenger should move the seat as far back as possible and sit upright and well back in the seat.

Carefully read the sections “Seat, seatbelt and SRS airbags” in chapter 1 of this owner’s manual for instructions and precautions concerning the seatbelt system and SRS airbag system.

■ Child safety

WARNING

- Never hold a child on your lap or in your arms while the vehicle is moving. The passenger cannot protect the child from injury in a collision, because the child will be caught between the passenger and objects inside the vehicle.
- While riding in the vehicle, infants and small children should always be placed in the REAR seat in an infant or child restraint system which is appropriate for the child’s age, height and weight. If a child is too big for a child restraint

system, the child should sit in the REAR seat and be restrained using the seatbelts. According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions. Never allow a child to stand up or kneel on the seat.

- Put children aged 12 and under in the REAR seat properly restrained at all times in a child restraint device or in a seatbelt. The SRS airbag deploys with considerable speed and force and can injure or even kill children, especially if they are 12 years of age and under and are not restrained or improperly restrained. Because children are lighter and weaker than adults, their risk being injured from deployment is greater.

- NEVER INSTALL A REARWARD FACING CHILD SAFETY SEAT IN THE FRONT SEAT. DOING SO RISKS SERIOUS INJURY OR DEATH TO THE CHILD BY PLACING THE CHILD’S HEAD TOO CLOSE TO THE SRS AIRBAG.

- Always use the child safety locks whenever a child rides in the rear seat. Serious injury could result if a child accidentally opened the door and fell out. Refer to the “Door locks” section in chapter 2.

- Always lock the passenger’s windows using

– CONTINUED –

the lock switch when children are riding in the vehicle. Failure to follow this procedure could result in injury to a child operating the power window. Refer to the “Power windows” section in chapter 2.

- Never leave unattended children in the vehicle. They could accidentally injure themselves or others through inadvertent operation of the vehicle. Also, on hot or sunny days, temperature in a closed vehicle could quickly become high enough to cause severe or possibly fatal injuries to them.

- Help prevent young children from locking themselves in the trunk. When leaving the vehicle, either close all windows and lock all doors or cancel the inside trunk lid release. Also make certain that the trunk is closed. On hot or sunny days, the temperature in a trunk could quickly become high enough to cause death or serious heat-related injuries including brain damage, particularly for small children.

Carefully read the sections “Child restraint systems”, “SRS airbag (Supplemental Restraint System airbag)”, and “Seatbelts” in chapter 1 of this owner’s manual for instructions and precautions concerning the child restraint system, seatbelt system and SRS

airbag system.

■ Engine exhaust gas (carbon monoxide)

WARNING

- Never inhale engine exhaust gas. Engine exhaust gas contains carbon monoxide, a colorless and odorless gas which is dangerous, or even lethal, if inhaled.
- Always properly maintain the engine exhaust system to prevent engine exhaust gas from entering the vehicle.
- Never run the engine in a closed space, such as a garage, except for the brief time needed to drive the vehicle in or out of it.
- Avoid remaining in a parked vehicle for a lengthy time while the engine is running. If that is unavoidable, then use the ventilation fan to force fresh air into the vehicle.
- Always keep the front ventilator inlet grille free from snow, leaves or other obstructions to ensure that the ventilation system always works properly.
- If at any time you suspect that exhaust fumes are entering the vehicle, have the problem

checked and corrected as soon as possible. If you must drive under these conditions, drive only with all windows fully open.

- Keep the trunk lid or rear gate closed while driving to prevent exhaust gas from entering the vehicle.

■ Drinking and driving

WARNING

Drinking and then driving is very dangerous. Alcohol in the bloodstream delays your reaction and impairs your perception, judgment and attentiveness. If you drive after drinking – even if you drink just a little – it will increase the risk of being involved in a serious or fatal accident, injuring or killing yourself, your passengers and others. In addition, if you are injured in the accident, alcohol may increase the severity of that injury.

Please don't drink and drive.

Drunken driving is one of the most frequent causes of accidents. Since alcohol affects all people differently,

you may have consumed too much alcohol to drive safely even if the level of alcohol in your blood is below the legal limit. The safest thing you can do is never drink and drive. However if you have no choice but to drive, stop drinking and sober up completely before getting behind the wheel.

■ Drugs and driving

WARNING

There are some drugs (over the counter and prescription) that can delay your reaction time and impair your perception, judgment and attentiveness. If you drive after taking them, it may increase your, your passengers' and other persons' risk of being involved in a serious or fatal accident.

If you are taking any drugs, check with your doctor or pharmacist or read the literature that accompanies the medication to determine if the drug you are taking can impair your driving ability. Do not drive after taking any medications that can make you drowsy or otherwise affect your ability to safely operate a motor vehicle. If you have a medical condition that requires you to take

– CONTINUED –

drugs, please consult with your doctor.

Never drive if you are under the influence of any illicit mind-altering drugs. For your own health and well-being, we urge you not to take illegal drugs in the first place and to seek treatment if you are addicted to those drugs.

■ Driving when tired or sleepy

WARNING

When you are tired or sleepy, your reaction will be delayed and your perception, judgment and attentiveness will be impaired. If you drive when tired or sleepy, your, your passengers' and other persons' chances of being involved in a serious accident may increase.

Please do not continue to drive but instead find a safe place to rest if you are tired or sleepy. On long trips, you should make periodic rest stops to refresh yourself before continuing on your journey. When possible, you should share the driving with others.

■ Car/Mobile phones and driving

CAUTION

Do not use a hand-held phone while driving; it may distract your attention from driving and can lead to an accident. If you use a hand-held phone, pull off the road and park in the safe place before using your phone. In some States/Provinces, only hands-free phones may legally be used while driving.

■ Modification of your vehicle

CAUTION

Your vehicle should not be modified. Modification could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from modification may not be covered under warranties.

■ Driving with pets

Unrestrained pets can interfere with your driving and distract your attention from driving. In a collision or sudden stop, unrestrained pets or cages can be thrown around inside the vehicle and hurt you or your passengers. Besides, the pets can be hurt under these situations. It is also for their own safety that pets should be properly restrained in your vehicle. Restrain a pet with a special traveling harness which can be secured to the rear seat with a seatbelt or use a pet carrier which can be secured to the rear seat by routing a seatbelt through the carrier's handle. Never restrain pets or pet carriers in the front passenger's seat. For further information, consult your veterinarian, local animal protection society or pet shop.

■ Tire pressures

WARNING

Driving at high speeds with excessively low tire pressures can cause the tires to deform severely and to rapidly become hot. A sharp increase in temperature could cause tread separation, and destruction of the tires. The resulting loss of vehicle control could lead to an accident.

Check and, if necessary, adjust the pressure of each tire (including the spare) at least once a month and before any long journey.

Check the tire pressure when the tires are cold. Use a pressure gauge to adjust the tire pressures to the values shown on the tire placard. Refer to the "Tires and wheels" section in chapter 11 for detailed information.

■ California proposition 65 warning

WARNING


Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. In addition, certain fluids in vehicles and certain components of product wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Table of contents


<i>Seat, seatbelt and SRS airbags</i>	1
<i>Keys and doors</i>	2
<i>Instruments and controls</i>	3
<i>Climate control</i>	4
<i>Audio</i>	5
<i>Interior equipment</i>	6
<i>Starting and operating</i>	7
<i>Driving tips</i>	8
<i>In case of emergency</i>	9
<i>Appearance care</i>	10
<i>Maintenance and service</i>	11
<i>Specifications</i>	12
<i>Consumer information and Reporting safety defects</i>	13
<i>Index</i>	14

Illustrated index

 ■ Exterior

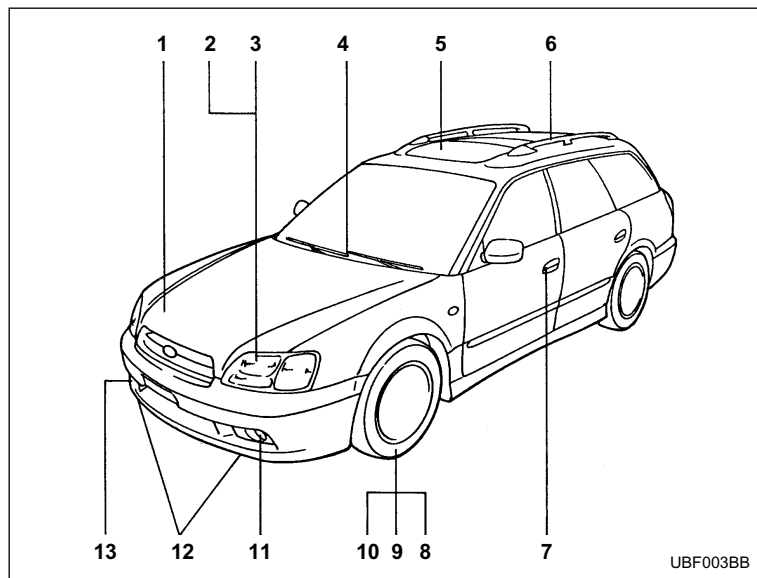

 - 1) Hood lock release (page 11-5)
- 2) Headlight switch (page 3-19)
- 3) Bulb replacement (page 11-65)
- 4) Wiper switch (page 3-26)
- 5) Moonroof (page 2-32)
- 6) Roof rail (page 8-20)
- 7) Door locks (page 2-3)
- 8) Tire pressure (page 11-44)
- 9) Flat tires (page 9-5)
- 10) Tire chains (page 8-15)
- 11) Fog light switch (page 3-24)
- 12) Tie-down hooks (page 9-21)
- 13) Towing hook (page 9-21)

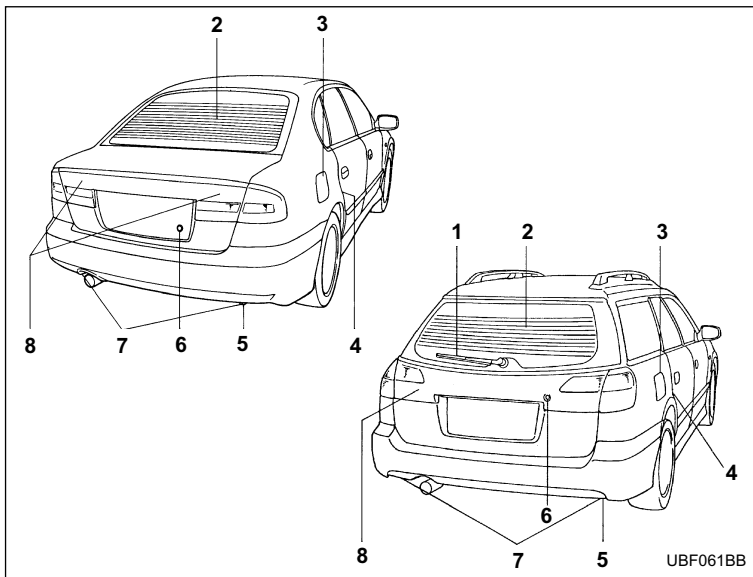


- 1) Rear wiper switch (page 3-27)
- 2) Rear window defogger switch (page 3-28)
- 3) Fuel filler lid (page 7-4)
- 4) Child safety locks (page 2-22)
- 5) Towing hook (page 9-21)
- 6) Trunk/Rear gate (page 2-26/2-31)
- 7) Tie-down hooks (page 9-21)
- 8) Bulb replacement (page 11-71)


– CONTINUED –

■ Interior

 ▼ Passenger compartment area

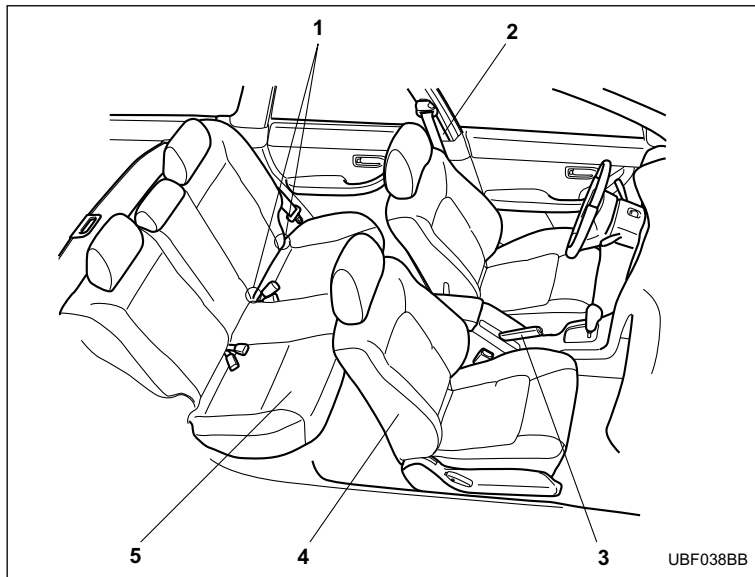


 - 1) Lower anchorage for child restraint system (page 2-22)
- 2) Seatbelt (page 1-18)
- 3) Parking brake lever (page 7-40)
- 4) Front seat (page 1-2)
- 5) Rear seat (page 1-10)

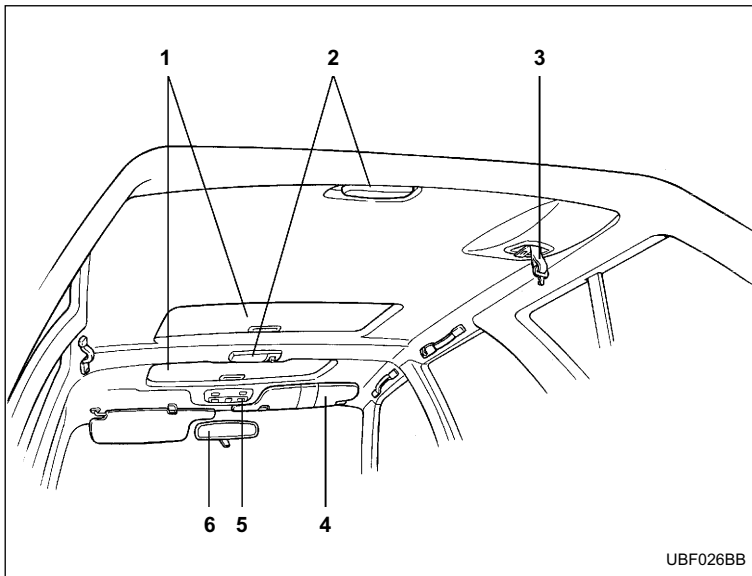


- 1) Moonroof (page 2-32)
- 2) Interior lights (page 6-2)
- 3) Rear center passenger's seat seatbelt (page 1-18)
- 4) Sun visors (page 6-4)
- 5) Map light (page 6-3)
- 6) Inside mirror (page 3-31)

 – CONTINUED –

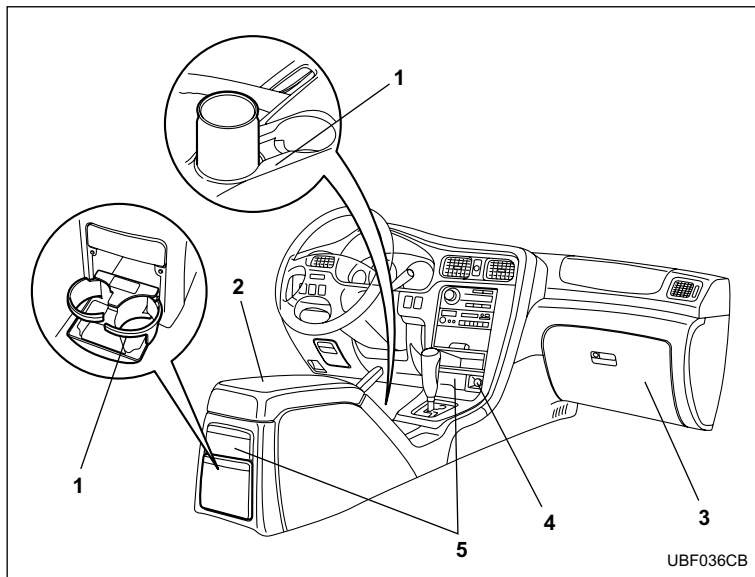

- 1) Cup holder (page 6-8)
- 2) Center console (page 6-6)
- 3) Glove box (page 6-6)
- 4) Cigarette lighter (page 6-10)
- 5) Ashtray (page 6-12)

 
▼ Trunk/cargo area

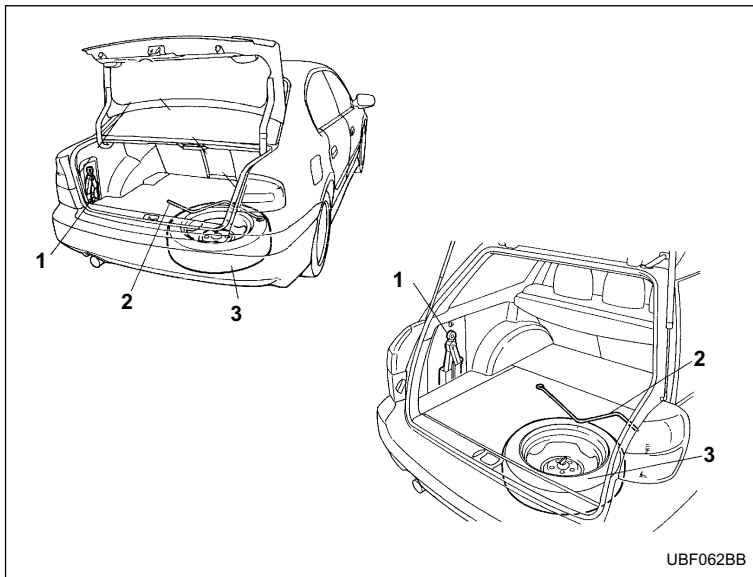

- 1) Jack (page 9-32)
- 2) Jack handle (page 9-32)
- 3) Spare tire (page 9-32)


– CONTINUED –

 ■ Instrument panel

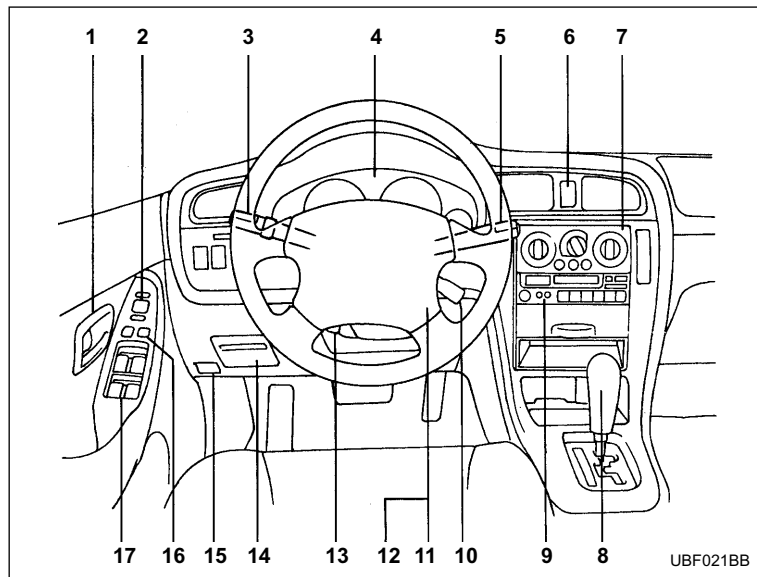

- 1) Door locks (page 2-3)
- 2) Outside mirror (page 3-33)
- 3) Light control lever (page 3-19)
- 4) Combination meter (page 3-7)
- 5) Wiper control lever (page 3-24)
- 6) Hazard warning flasher switch (page 3-6)
- 7) Climate control (page 4-1)
- 8) Gear shift lever (MT) (page 7-12)/Selector lever (AT) (page 7-15)
- 9) Audio (page 5-1)
- 10) Cruise control (page 7-42)
- 11) Horn (page 3-36)
- 12) SRS airbag (page 1-57)
- 13) Tilt steering (page 3-35)
- 14) Fuse box (page 11-59)
- 15) Hood lock release (page 11-5)
- 16) Power door locking switch (page 2-5)
- 17) Power window (page 2-23)

 ■ Light control and wiper control levers/switches

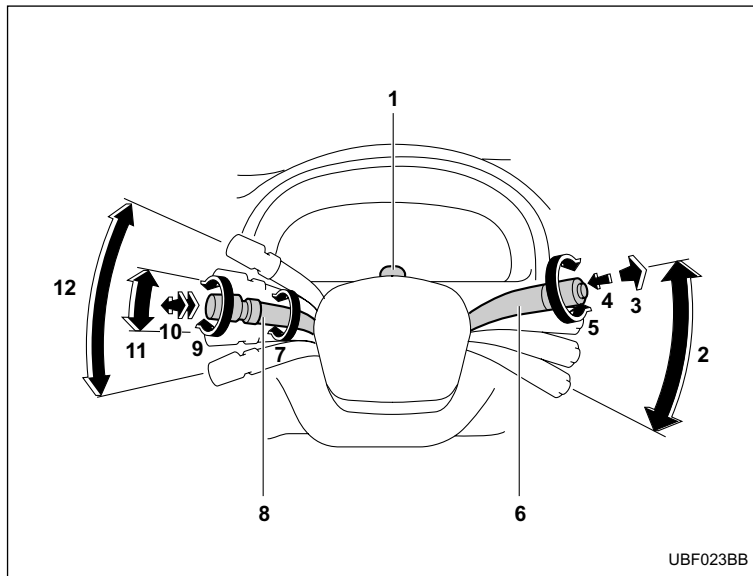


 - 1) Parking light switch (page 3-23)
- 2) Windshield wiper (page 3-24)
- 3) Mist (page 3-26)
- 4) Windshield washer (page 3-26)
- 5) Rear window wiper and washer switch (page 3-27)
- 6) Wiper control lever (page 3-26)
- 7) Illumination brightness control (page 3-22)
- 8) Light control lever (page 3-19)
- 9) Headlight ON/OFF (page 3-19)
- 10) Headlight flasher High/Low beam change (page 3-19)
- 11) Turn signal (for lane change) (page 3-21)
- 12) Turn signal (page 3-21)


 



– CONTINUED –



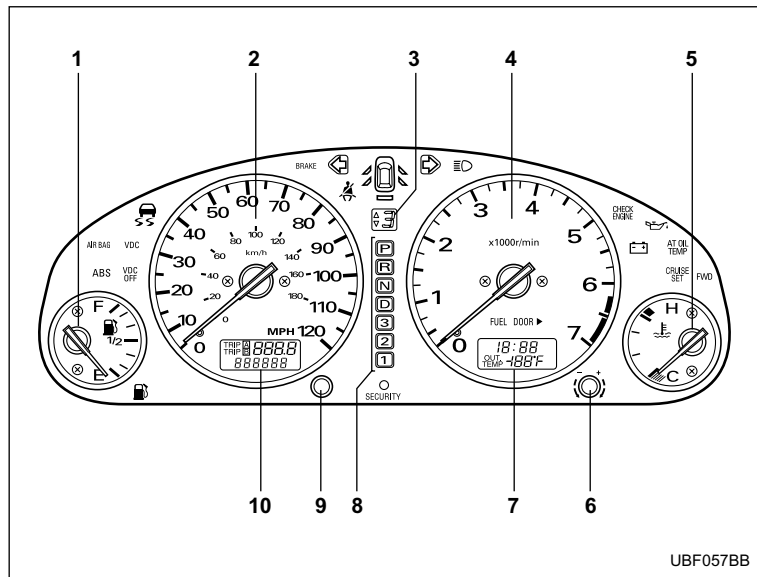



■ Combination meter

▼ Overview



▼ Warning and indicator light

Mark	Name	Page
	Seatbelt warning light	3-10
AIR BAG	SRS airbag system warning light	3-10
CHECK ENGINE	CHECK ENGINE warning light/Malfunction indicator lamp	3-11
	Charge warning light	3-12
	Oil pressure warning light	3-12
AT OIL TEMP	AT OIL temperature warning light (if equipped)	3-12
ABS or 	ABS warning light	3-13
VDC	VDC warning light (if equipped)	3-13
BRAKE or 	Brake system warning light	3-14

Mark	Name	Page
	Door open warning light	3-15
	Low fuel warning light	3-15
FWD	Front-wheel drive warning light (if equipped)	3-15
	VDC operation indicator light (if equipped)	3-15
VDC OFF	VDC OFF indicator light (if equipped)	3-16
	Security system indicator light (if equipped)	3-16
	Turn signal indicator lights	3-17
	High beam indicator light	3-18
CRUISE SET	Cruise control set indicator light	3-18

A

ABS (Anti-lock Brake System)	7-32
Warning light	3-13, 7-33
Accessories	5-3, 11-62
Accessory power outlet	6-11
Air cleaner element	11-22
Air conditioner operation	4-10
Air filtration system	4-21
Air flow selection	4-4
Aluminum wheels	11-51
Antenna system	5-2
Anti-lock Brake System (ABS)	7-32
Arming the system	2-15
Armrest	1-11
Ashtray	6-12
AT OIL TEMPerature warning light	3-12
Audio set	5-4
Auto-dimming mirror/compass	3-31
Automatic/Emergency Locking Retractor (A/ELR)	1-20
Automatic transmission	7-15, 7-21
Capacities	12-4
Fluid	11-28
Selector lever	7-16, 7-22
Shift lock release	7-20, 7-28
Temperature warning light	3-12

B

Battery	11-58
Jump starting	9-15
Replacement (Remote keyless entry system)	2-10
Brake	
Booster	11-39
Fluid	11-36
Pad and lining	11-41
Pedal	11-39
Brake system	7-31
Warning light	3-14
Braking	7-30
Breaking-in of new brake pads and linings	11-42
Tips	7-30
Brake pedal	
Free play	11-39
Reserve distance	11-40
Bulb	
Chart	12-12
Replacing	11-63

C

Capacities	12-4
Cargo area light	6-2
Catalytic converter	8-4

Center			
Console	6-6		
Ventilators	4-2		
Changing			
Flat tire	9-5		
Oil and oil filter	11-12		
Charge warning light	3-12		
CHECK ENGINE warning light/ Malfunction indicator lamp	3-11		
Checking			
Brake pedal free play	11-39		
Brake pedal reserve distance	11-40		
Clutch function	11-40		
Clutch pedal free play	11-41		
Engine oil level	11-11		
Fluid level	11-28, 11-35, 11-36, 11-38		
Gear oil level	11-27, 11-30, 11-32		
Child restraint systems	1-37		
Installation with seatbelt	1-41		
Lower and tether anchorages	1-48		
Child safety	5		
Locks	2-22		
Chime			
Key	3-5		
Seatbelt	1-20, 3-10		
Cigarette lighter socket	6-10		
Cleaning			
Aluminum wheels	10-4		
Interior	10-7		
Ventilator grille	4-19		
Climate control system			
Manual	4-5		
Automatic	4-11		
Clock	3-18		
Clutch fluid	11-38		
Clutch pedal	11-40		
Coat hook	6-20		
Coin compartment	6-7		
Convenience hook	6-20		
Convenient tie-down hooks	6-24		
Cooling system	11-17		
Corrosion protection	8-13, 10-5		
Cruise control	7-42		
Set indicator light	3-18		
Cup holder	6-8		
D			
Daytime running light system	3-21		
Differential gear oil			
Front	11-30		
Rear	11-32		
Dimensions	12-2		
Disarming the system	2-17		

Index

Disc brake pad wear warning indicators	7-31
Dome light	6-2, 11-76
Door locks	2-3
Door open warning lights	3-15
Drive belts	11-26
Driving	
Drinking	7
Drugs	7
Foreign countries	8-6
Car/Mobile phone	8
Pets	9
Tips	7-14, 7-19, 7-28, 8-6
Tired or sleepy	8
Snowy and icy roads	8-12

E

Electrical system	12-3
Emergency Locking Retractor (ELR)	1-19
Engine	
Compartment overview	11-8
Coolant	11-18
Exhaust gas (Carbon monoxide)	6, 8-3
Hood	11-5
Oil	11-11
Overheating	9-19
Starting	7-10
Stopping	7-12

Exterior care	10-2
---------------------	------

F

Flat tires	9-5
Floor mat	6-21
Fluid level	
Automatic transmission	11-28
Brake	11-36
Clutch	11-38
Power steering	11-35
Fog light switch	3-24
Folding down the rear seat	1-14
Front	
Differential gear oil	11-30
Fog light	11-69
Seatbelt pretensioners	1-34
Seats	1-2
Turn signal light, parking light and marker light	11-69
Front-wheel drive warning light	3-15
Fuel	7-2
Economy hints	8-2
Filler lid and cap	7-4
Gauge	3-8
Requirements	7-2
Fuses	11-59
Fuses and circuits	12-6

G

GAWR (Gross Axle Weight Rating)	8-19
Glove box	6-6
GVWR (Gross Vehicle Weight Rating)	8-19

H

Hazard warning flasher	3-6
Headlights	3-19, 11-65
Headrest adjustment (Wagon)	1-13
Head restraint adjustment (Front)	1-7
Heater operation	4-7
High beam indicator light	3-18
High mount stop light	11-79
Horn	3-36
Hose and connections	11-18

I

Ignition switch	3-3
Illuminated entry	2-9
Illumination brightness control	3-22
Indicator light	
High beam	3-18
Selector lever position	3-17
Turn signal	3-17
Inside mirror	3-31
Internal trunk lid release handle	2-28

J

Jack and jack handle	9-32
Jump starting	9-15

K

Key	
Interlock release	3-5
Number	2-2
Reminder chime	3-5
Keys	2-2

L

Leather seat materials	10-7
Light control switch	3-19
Limited slip differential (LSD)	7-29
Loading your vehicle	8-17
LSD (Limited slip differential)	7-29
Luggage cover	6-22

M

Main fuse	11-61
Maintenance	
Precautions	11-3
Schedule	11-3
Seatbelt	1-31
Tools	9-31

Index

Manual heating and air conditioning system ...	4-5
Manual transmission	7-12
Manual transmission oil	11-27
Map light	6-3, 11-76
Maximum load limits	8-29
Meters and gauges	3-7
Mirrors	3-31
Moonroof	2-32, 9-29

N

New vehicle break-in driving – the first 1,000 miles (1,600 km)	8-2
--	-----

O

Odometer/Trip meter	3-7
Off road driving	8-8
Oil pressure warning light	3-12
Oil filter	11-12
Oil level	
Engine	11-11
Manual transmission	11-27
Rear differential	11-32
OnStar®	
Personal calling	6-17
Services	6-15
Subscription plans	6-15
System	6-13

Limitations	6-18
Virtual advisor	6-17
Outside mirrors	3-33
Overheating engine	9-19

P

Parking	
Brake stroke	11-43
Light switch	3-23
Power	
Door locking switches	2-5
Steering	7-30
Steering fluid	11-35
Windows	2-23
Printed antenna	5-2

R

Rear	
Combination lights	11-71
Differential gear oil	11-32
Gate	2-31
Seats	1-10
Rear seat	
Folding down (Wagon)	1-14
Rear window	
Defogger switch	3-28
Wiper and washer switch	3-27

Recommended		
Automatic transmission fluid	11-30	
Brake fluid	11-37	
Clutch fluid	11-38	
OIL grade and viscosity	11-15, 11-16, 11-27	
	11-31, 11-34	
Power steering fluid	11-35	
Spark plugs	11-25	
Remote keyless entry system	2-7	
Replacement		
Brake pad and lining	11-41	
Wiper blades	11-52	
Replacing		
Air cleaner element	11-22	
Battery (remote keyless entry system)	2-10	
Lost transmitters (keyless entry system)	2-11	
Replacing bulbs	11-63	
Dome light	11-76	
Front fog light	11-69	
Front turn signal light	11-69	
Headlight	11-65	
High mount stop light	11-79	
License plate light	11-76	
Luggage compartment light	11-76	
Map light	11-76	
Parking light	11-69	
Rear combination light	11-71	
Trunk light	11-79	
Rocking the vehicle	8-16	
Roof rail and crossbar	8-20	
S		
Seat		
Fabric	10-7	
Heater	1-9	
Seatbelt	4	
Maintenance	1-31	
Pretensioners	1-34	
Safety tips	1-18	
Warning light and chime	1-20, 3-10	
Seatbelts	1-18	
Security system	2-15	
Selector lever	7-16, 7-22	
Position indicator	3-17	
Shift lock release	7-20, 7-28	
Snow tires	8-14	
Sounding a panic alarm	2-9	
Spark plugs	11-25	
Specifications	12-2	
Speedometer	3-7	
SRS airbag (Supplemental Restraint		
System airbag)	4, 1-57	
SRS airbag system warning light	3-10	
SRS frontal airbag	1-62	

Index

SRS side airbag	1-70
Starting the engine	7-10
State emission testing (U.S. only)	7-7
Stopping the engine	7-12
Storage compartments	6-5
Subfloor storage	6-25
Sun visors	6-4
Sun shades	2-36
Supplemental Restraint System airbag (SRS)	1-62
Synthetic leather upholstery	10-7

T

Tachometer	3-8
Temperature gauge	3-9
Temporary spare tire	9-3
Tie-down hooks	9-21
Tilt steering wheel	3-35
Tire	
Chains	8-15
Inspection	11-44
Pressures and wear	11-44
Replacement	11-48
Rotation	11-48
Tires	12-5
Types	11-43
Tires and wheels	11-43
Top tether anchorages	1-52

Towing	9-20
All wheels on the ground	9-28
Flat-bed truck	9-27
Trailer	
Hitch	8-25
Hitches	8-34
Towing	8-28
Towing tips	8-37
Trunk lid	2-26
Release handle	2-28
Trunk light	11-79
Turn signal	
Indicator lights	3-17
Lever	3-21

V


Valet mode	2-18
Vanity mirror	6-5
VDC (Vehicle Dynamics Control)	
OFF switch	7-38
OFF indicator light	3-16
Operation indicator light	3-15
System	7-34
Warning light	3-13
Vehicle	
Capacity weight	8-18
Identification	12-13

Vehicle Dynamics Control (VDC) system	7-34
Ventilator	4-2

W

Warning and indicator lights	3-10
Warning lights	
ABS	3-13
Anti-lock Brake system	3-13
AT OIL TEMPerature	3-12
Brake system	3-14
Charge	3-12
CHECK ENGINE	3-11
Door open	3-15
Front-wheel drive	3-15
Oil pressure	3-12
Seatbelt	1-20, 3-10
SRS airbag system	3-10
Warranties and maintenance	8-28
Washing	10-2
Waxing and polishing	10-3
Wear indicators	11-47
Wheel	
Alignment	12-5
Balance	11-47
Covers	11-50
Replacement	11-49
Windows	2-23

Windshield	
Washer fluid	11-51
Wiper and washer switches	3-26
Wiper deicer	3-30
Winter driving	8-11
Wiper and washer	3-24

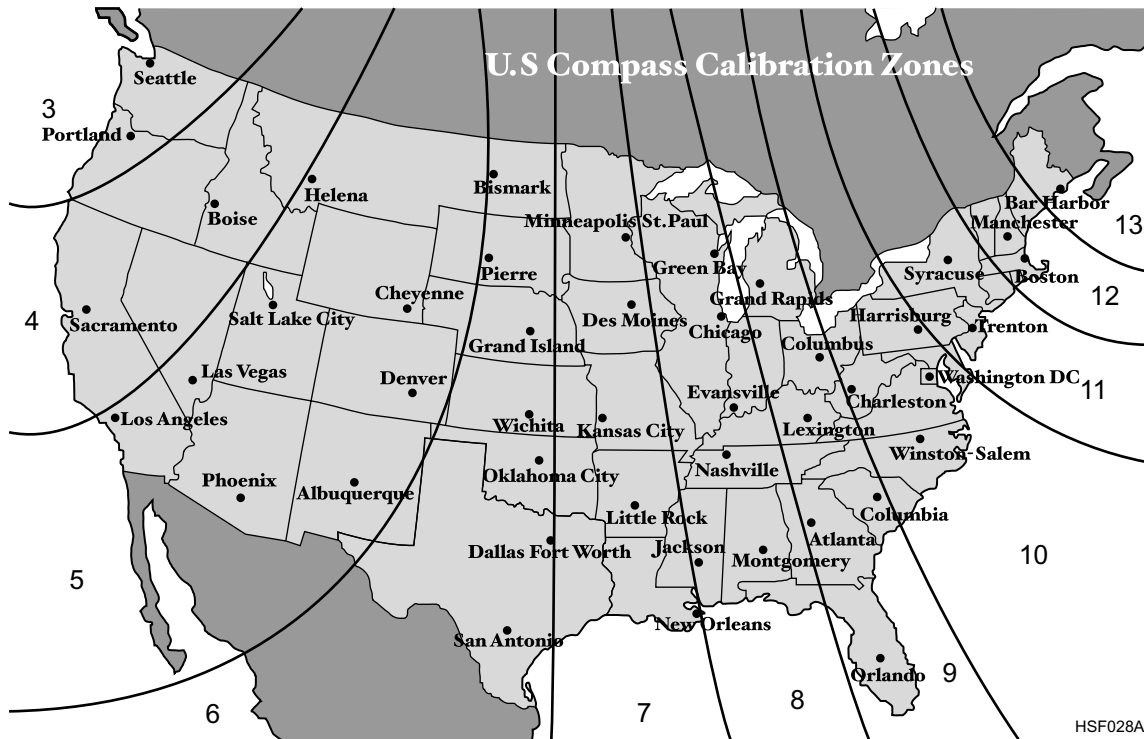 

GAS STATION REFERENCE

Fuel:

“Fuel” section in this manual.

▼ 2.5 Liter models

Use only unleaded gasoline with an octane rating of 87 AKI or higher.

▼ 3.0 Liter models

Use premium unleaded gasoline with an octane rating of 91 AKI or higher. Regular unleaded gasoline with an octane rating of 87 AKI may be used if necessary. For optimum engine performance and driveability, it is recommended that you use premium grade unleaded gasoline.

■ Fuel octane rating

This octane rating is the average of the Research Octane and Motor Octane numbers and is commonly referred to as the Anti Knock Index (AKI). Refer to

Fuel capacity:

16.9 US gal (64 liters, 14.1 Imp gal)

Engine oil:

Use only API classification SL with the words “ENERGY CONSERVING” and the New API certification mark (starburst mark) displayed on the container.

Engine oil capacity:

2.5 liter models: 4.2 US qt (4.0 liters, 3.5 Imp qt)

3.0 liter models: 5.6 US qt (5.3 liters, 4.6 Imp qt)

Cold tire pressure:

Tire size		P205/60R15 90H	P205/55R16 89H	P225/60R16 97H
Wheel size		15 x 6JJ	16 x 6 ¹ / ₂ JJ	
Pressure	Front	32 psi (220 kPa, 2.2 kg/cm ²)		30 psi (210 kPa, 2.1 kg/cm ²)
	Rear	30 psi (210 kPa, 2.1 kg/cm ²)		29 psi (200 kPa, 2.0 kg/cm ²)
	Rear at trailer towing	—		32 psi (220 kPa, 2.2 kg/cm ²)
Temporary spare tire	Size	T135/70R16	T145/80R16	
	Pressure	60 psi (420 kPa, 4.2 kg/cm ²)		