

INTAKE (INDUCTION)

IN(H6DO)


	Page
1. General Description	2
2. Air Cleaner	5
3. Air Intake Chamber	6
4. Air Intake Duct.....	7
5. Resonator Chamber	8

GENERAL DESCRIPTION

INTAKE (INDUCTION)

1. General Description

A: COMPONENT

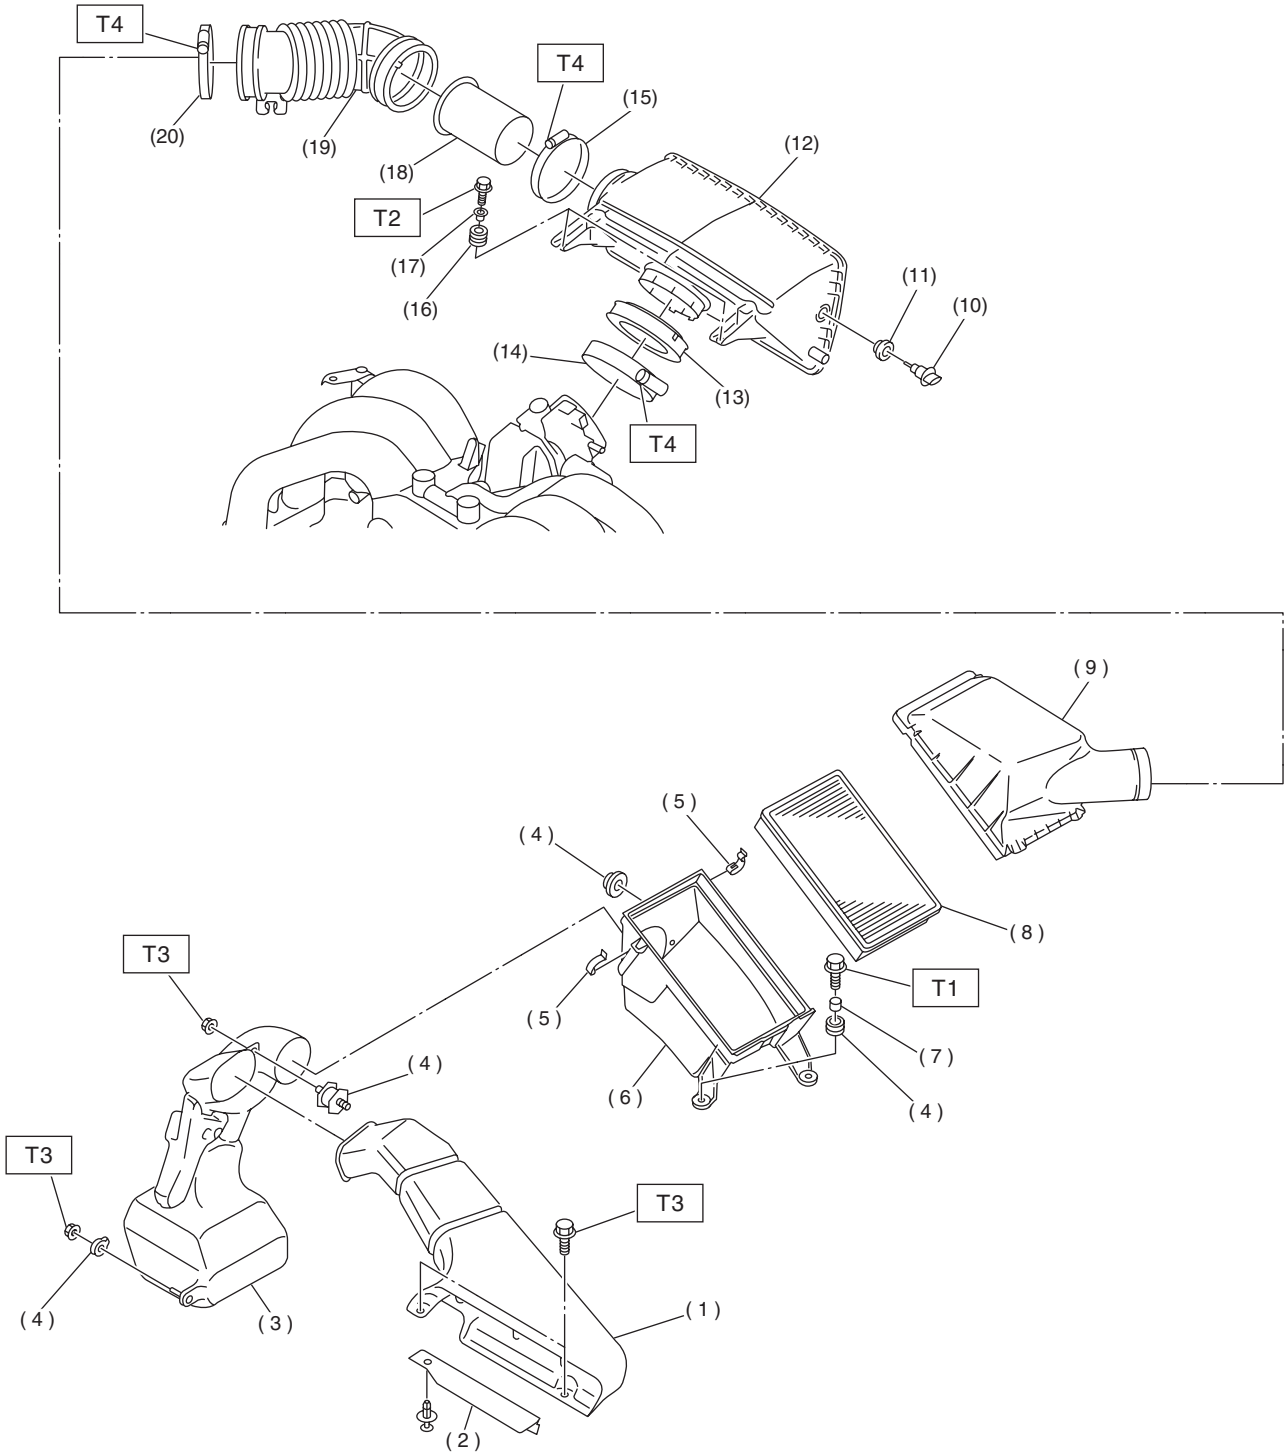

IN-00064

GENERAL DESCRIPTION

INTAKE (INDUCTION)

- (1) Air intake duct
- (2) Plate
- (3) Resonator chamber
- (4) Cushion
- (5) Clip
- (6) Air cleaner lower case
- (7) Spacer
- (8) Air cleaner element
- (9) Air cleaner upper cover

- (10) Intake air temperature sensor
- (11) Grommet
- (12) Air intake chamber
- (13) Grommet
- (14) Clamp
- (15) Clamp
- (16) Cushion
- (17) Spacer
- (18) Intake duct

- (19) Air intake boot
- (20) Clamp

Tightening torque: N-m (kgf-m, ft-lb)

T1: 33 (3.4, 24.6)

T2: 6.4 (0.65, 4.7)

T3: 7.5 (0.76, 5.5)

T4: 3 (0.3, 2.2)

GENERAL DESCRIPTION

INTAKE (INDUCTION)


B: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensor or units, be sure to disconnect ground cable from battery.


2. Air Cleaner

A: REMOVAL

- 1) Loosen clamp (A), and separate air cleaner upper cover from air intake boot.
- 2) Remove the clip (B) above the air cleaner upper cover.

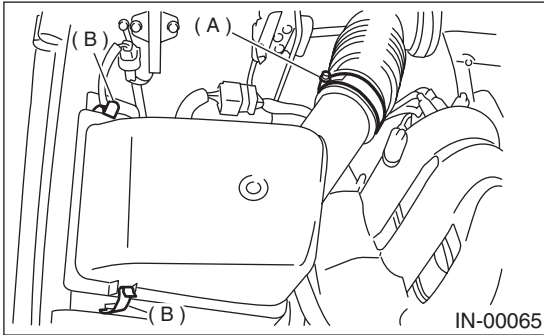

- 3) Remove air cleaner element.
- 4) Remove air cleaner lower case.

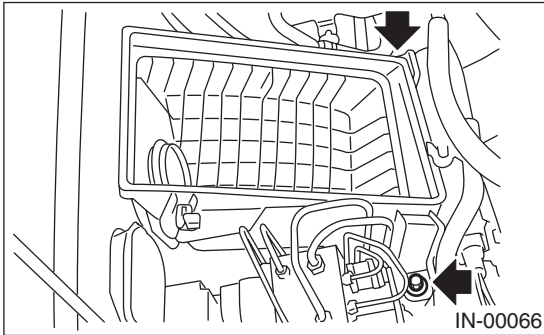


B: INSTALLATION

- 1) Install the air cleaner lower case.

Tightening torque:


33 N·m (3.4 kgf-m, 24.6 ft-lb)

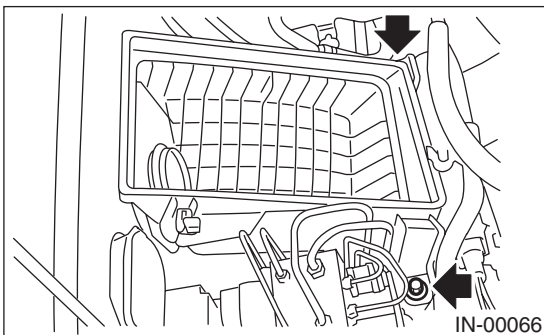


- 2) Set the air cleaner element.
- 3) Install the air cleaner upper cover.

NOTE:

Before installing air cleaner upper cover, align holes with protruding portions of air cleaner lower case, then secure upper cover to lower case.

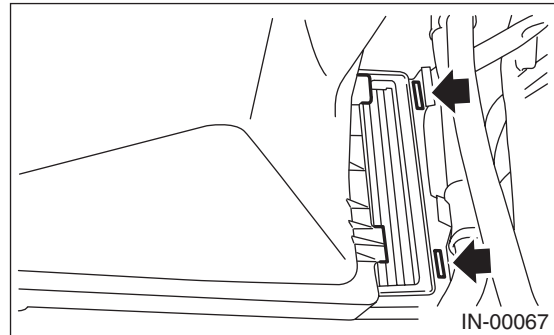

- 4) Install the clip (B) above the air cleaner upper cover.
- 5) Tighten clamp (A), and connect air intake boot and air cleaner upper cover.

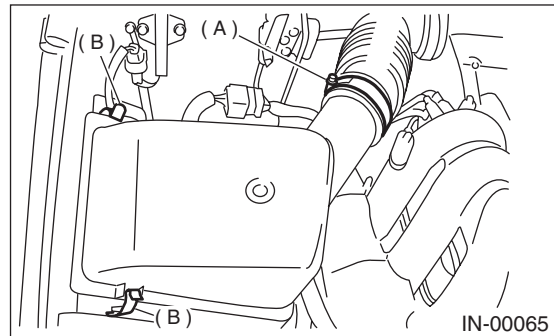

C: INSPECTION

Replace if excessively damaged or dirty.


AIR INTAKE CHAMBER

INTAKE (INDUCTION)


3. Air Intake Chamber

A: REMOVAL

1) Disconnect ground cable from battery.

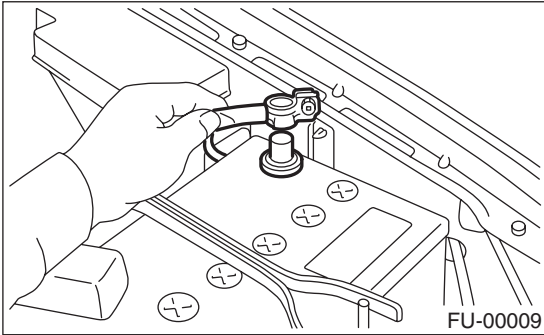


2) Disconnect connector from intake air temperature sensor.

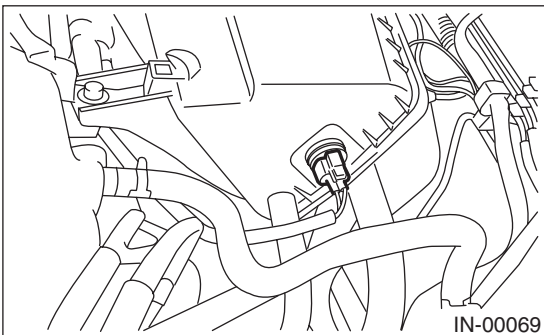

3) Loosen clamp (A) which connects air intake chamber to throttle body.

4) Remove bolts (B) which install air intake chamber to intake manifold.

5) Loosen clamp (C) which connects air intake chamber to air intake boot.

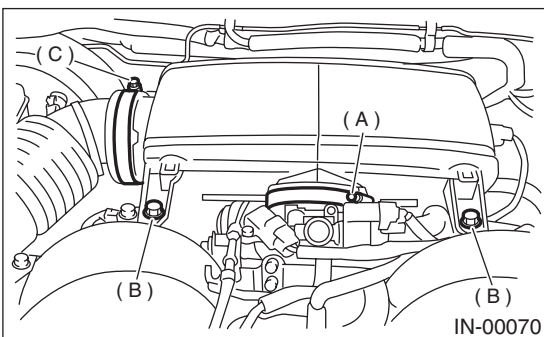

6) Disconnect hoses from air intake chamber.

7) Remove air intake chamber.

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

Inspect for cracks and loose connections.

4. Air Intake Duct

A: REMOVAL

Remove bolts which install air intake duct on the front side of body.

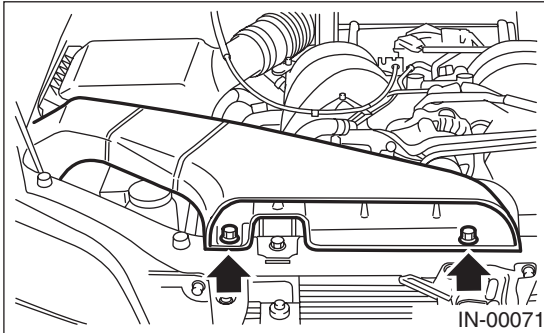

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

Inspect for cracks and loose connections. Check that no foreign objects are mixed in the air intake duct.


5. Resonator Chamber

A: REMOVAL

- 1) Set vehicle on a lift.
- 2) Remove air intake duct. <Ref. to IN(H6DO)-7, REMOVAL, Air Intake Duct.>
- 3) Remove air cleaner lower case. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner.>
- 4) Remove the resonator chamber mounting bolt on the right of engine compartment.

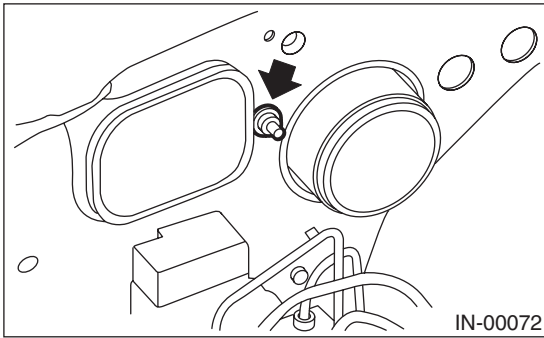

- 5) Remove the front right tire, and lift the vehicle.
- 6) Remove front mudguard RH.
- 7) Remove the resonator chamber (A) from the inside front fender.

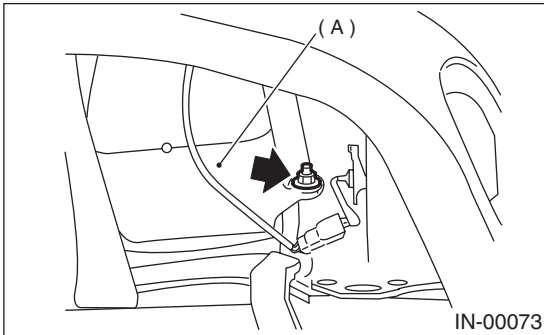

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Inspect for cracks and loose connections. Check that no foreign objects are mixed in the resonator chamber.