

# Fuel Tank Pressure Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


## 10. Fuel Tank Pressure Sensor

### A: REMOVAL


#### WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel.

- 1) Set the vehicle on a lift.
- 2) Open the fuel filler flap lid, and remove the fuel filler cap.
- 3) Disconnect the ground cable from the battery.

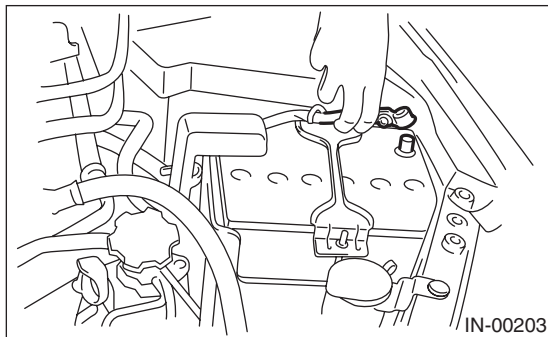

- 4) Lift-up the vehicle.
- 5) Disconnect the connector from the fuel tank pressure sensor.
- 6) Disconnect the pressure hose from the fuel tank pressure sensor.
- 7) Remove the fuel tank pressure sensor along with the bracket.

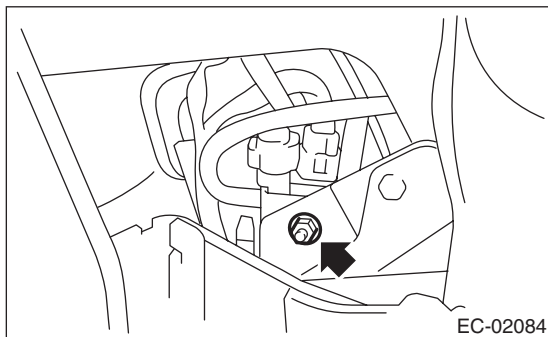


### B: INSTALLATION

Install in the reverse order of removal.

#### Tightening torque:

**7.4 N·m (0.75 kgf-m, 5.4 ft-lb)**

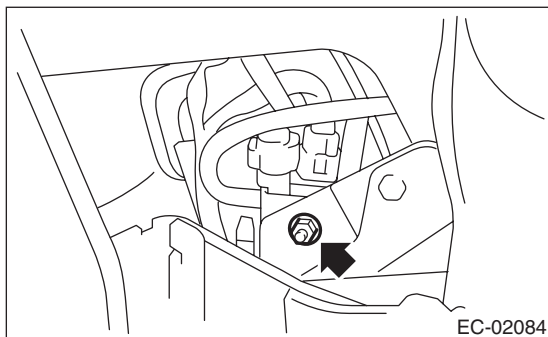

### C: INSPECTION

Make sure the hoses are not cracked or loose.