

PCV Hose Assembly

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


15.PCV Hose Assembly

A: REMOVAL

CAUTION:

Do not remove unless the PCV hose, diagnostics connector and PCV valves are damaged.

- 1) Remove the air intake chamber. <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>
 - 2) Fit the depression in the ST with the protrusion on the clamp to unlock.
 - 3) Remove the PCV hose assembly.
- ST 18353AA000 CLAMP PLIERS

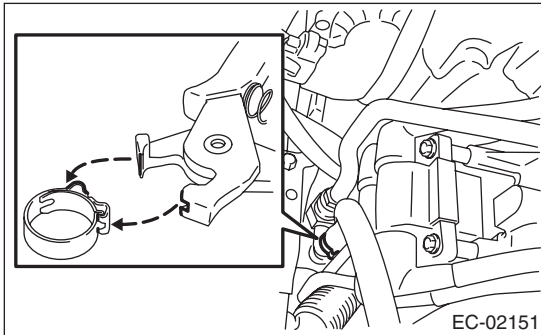


B: INSTALLATION

NOTE:

Replace with a new clamp.

- 1) Install the PCV hose assembly, then lock by fitting the ST on the clamp protrusion.

ST 18353AA000 CLAMP PLIERS

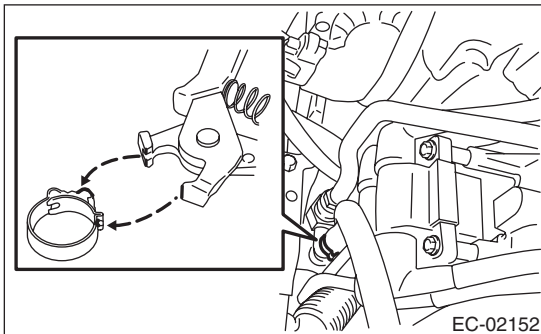

- 2) Install the air intake chamber. <Ref. to IN(H4SO)-7, INSTALLATION, Air Intake Chamber.>

INTAKE (INDUCTION)

IN(H4SO)

	Page
1. General Description	2
2. Air Cleaner Element	4
3. Air Cleaner Case	5
4. Air Intake Chamber	7
5. Air Intake Duct	8
6. Resonator Chamber	9