

# EGR Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

## 6. EGR Valve

### A: REMOVAL

Refer to the "FU" section for the removal procedures. <Ref. to FU(H4SO)-27, REMOVAL, EGR Valve.>

### B: INSTALLATION

Refer to the "FU" section for the installation procedures. <Ref. to FU(H4SO)-27, INSTALLATION, EGR Valve.>