


Air Cleaner Element

INTAKE (INDUCTION)


2. Air Cleaner Element

A: REMOVAL


1) Disconnect the ground cable from battery.

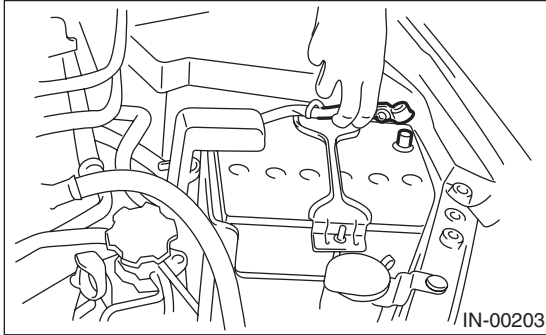

2) Disconnect the connector from mass air flow and intake air temperature sensor.

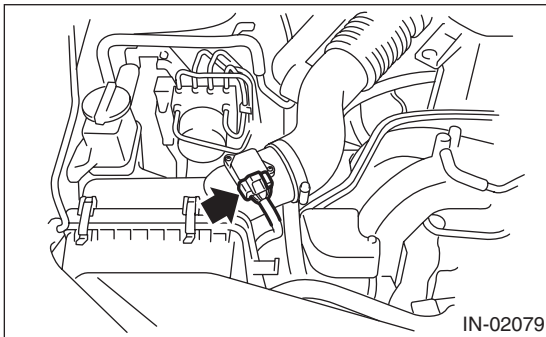

3) Remove the clip (A) securing upper side of air cleaner case.

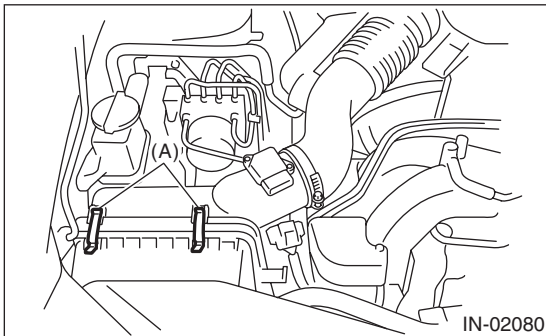

4) Pull the air cleaner case (rear) backward of the vehicle, and remove the air cleaner element.

NOTE:

Be careful of the power steering hose fixed to the bottom of the air cleaner case (rear).

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

Be sure to use **SUBARU** genuine air cleaner element depending on the engine type when replacing the air cleaner elements. Otherwise engine performance may be damaged.

NOTE:

Fasten with a clip after inserting the lower tab of case.

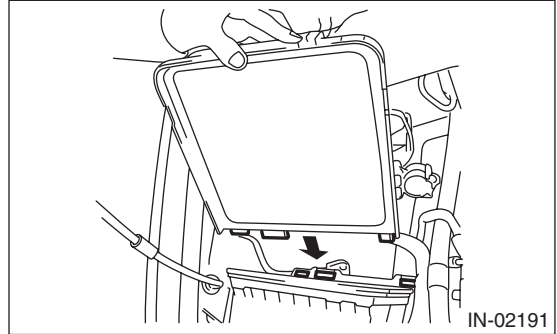

C: INSPECTION

1) Replace if excessively damaged or dirty.

2) Replace the air cleaner case (rear) if the HC absorption filter is damaged. (U5 model)