

# Air Intake Duct


INTAKE (INDUCTION)

---

## 5. Air Intake Duct

### A: REMOVAL

- 1) Remove the clip which installs the air intake duct on the front side of body.
- 2) Remove the air intake duct.

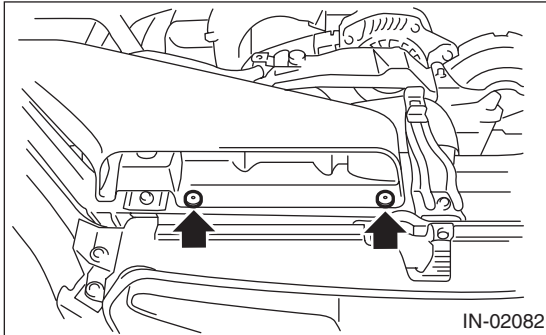

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Check for cracks or loose connections.
- 2) Check that no foreign matter is mixed in air intake duct.