

## 6. Resonator Chamber

### A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for the removal procedure. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>

### B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for the installation procedure. <Ref. to IN(H4SO)-6, INSTALLATION, Air Cleaner Case.>

### C: INSPECTION

Check for cracks or loose connections.

# Resonator Chamber

INTAKE (INDUCTION)

---

IN(H4SO)-10

# MECHANICAL

# ME(H4SO)

---

	<b>Page</b>
1. General Description .....	2
2. Compression .....	21
3. Idle Speed .....	22
4. Ignition Timing .....	23
5. Intake Manifold Vacuum .....	24
6. Engine Oil Pressure .....	25
7. Fuel Pressure .....	26
8. Valve Clearance .....	27
9. Engine Assembly .....	29
10. Engine Mounting .....	35
11. Preparation for Overhaul .....	36
12. V-belt .....	37
13. Crank Pulley .....	39
14. Timing Belt Cover .....	40
15. Timing Belt .....	41
16. Cam Sprocket .....	46
17. Crank Sprocket .....	47
18. Valve Rocker Assembly .....	48
19. Camshaft .....	51
20. Cylinder Head .....	55
21. Cylinder Block .....	62
22. Oil Switching Solenoid Valve .....	83
23. Intake and Exhaust Valve .....	85
24. Piston .....	86
25. Connecting Rod .....	87
26. Crankshaft .....	88
27. Engine Trouble in General .....	89
28. Engine Noise .....	95