


Oil Pressure Switch

LUBRICATION


6. Oil Pressure Switch

A: REMOVAL

- 1) Remove the generator from the bracket. <Ref. to SC(H4SO)-20, REMOVAL, Generator.>
- 2) Disconnect the terminal from oil pressure switch.

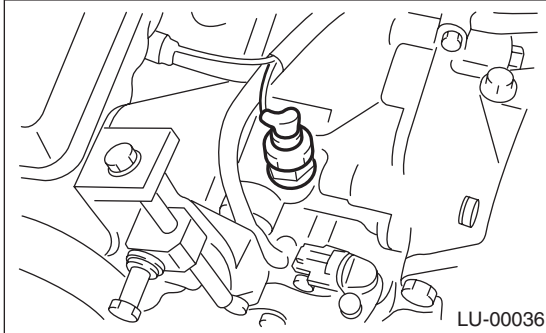


- 3) Remove the oil pressure switch.

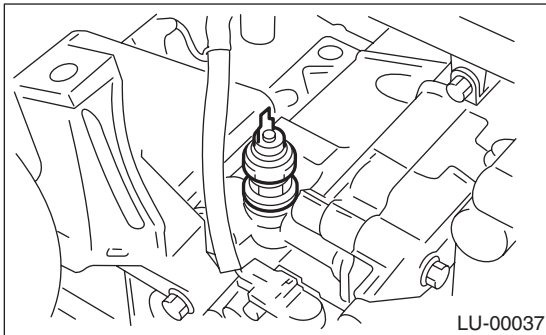

B: INSTALLATION


- 1) Apply liquid gasket to the oil pressure switch threads.

Liquid gasket:
THREE BOND 1324 (Part No. 004403042) or equivalent

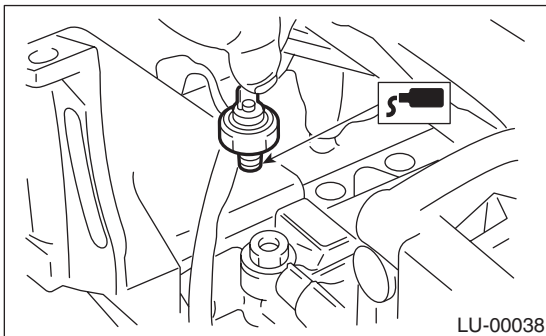


- 2) Install the oil pressure switch onto engine block.

Tightening torque:
25 N·m (2.5 kgf·m, 18.4 ft·lb)

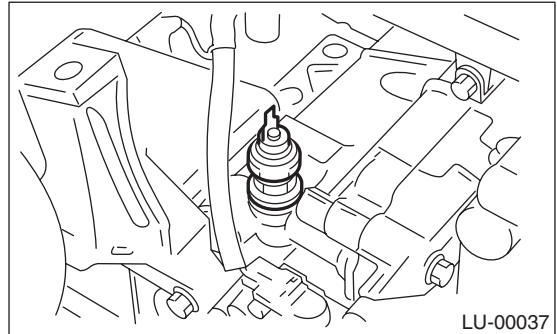

- 3) Connect the terminal to the oil pressure switch.

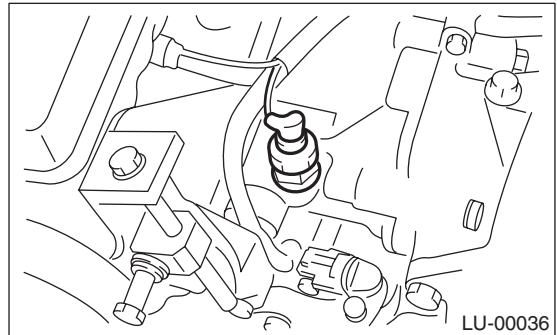

- 4) Install the generator to the bracket. <Ref. to SC(H4SO)-20, INSTALLATION, Generator.>

C: INSPECTION

Check the oil pressure switch installation portion for oil leakage and oil seepage.