

25.Connecting Rod

A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of connecting rod.

<Ref. to ME(H4SO)-62, REMOVAL, Cylinder Block.> <Ref. to ME(H4SO)-66, INSTALLATION, Cylinder Block.>